

Operator's Manual

Do not remove this manual
from the truck.

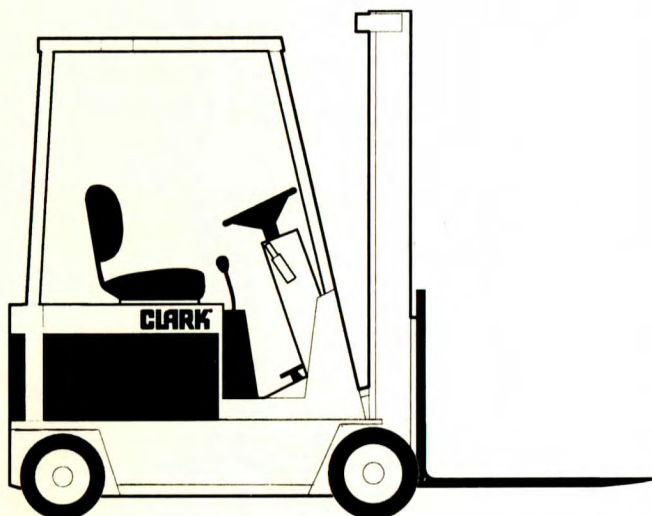

EC500 S30/S35

CLARK

Book No. 2795356
OM-595

Record the following information pertaining to your truck.

Model No. _____

Serial No. _____

Customer Truck Identification No. _____

Truck Weight, Empty _____

Truck Rated Capacity _____

Truck Gross Weight, Loaded w / Rated Load _____

Special Equipment _____

IMPORTANT

Do not expose this manual to hot water or steam.

Operator's Manual

You must be trained and authorized to operate a lift truck.

YOU can prevent accidents

First: Learn safe operating rules and your company rules.

Next: Read this *Operator's Manual*. If you do not understand it, ask your supervisor for help.



Learn about the unit you operate.



KNOW YOUR TRUCK

Then: Practice operating your truck safely.

And: Keep your truck in safe operating condition with correct and timely maintenance.



Breaking these rules will cause serious or fatal injury to yourself and others

A Message to CLARK Lift Truck Operators

Lift trucks are specialized machines with unique operating characteristics, designed to perform a specific job. Their function and operation is not like a car or ordinary truck. They require specific instructions and rules for safe operation and maintenance.

Safe operation of lift trucks is of primary importance to CLARK. Our experience with lift truck accidents has shown that when accidents happen and people are killed or injured, the causes are:

- **Operator not properly trained**
- **Operator not experienced with lift truck operation**
- **Basic safety rules not followed**
- **Lift truck not maintained in safe operating condition.**

For these reasons, CLARK provides this *Operator's Manual* to help you know about the safe operation and correct maintenance of your lift truck.

This manual is designed to help you operate your lift truck safely. This manual shows and tells you about safety inspections and the important general safety rules and hazards of lift truck operation. It describes the special components and features of the truck and their function. The correct operating procedures are shown and explained. Illustrations and important safety messages are included for clear understanding. A Section on maintenance and lubrication is included for the lift truck mechanic.

The *Operator's Manual* is not a training manual. It is a guide to help trained and authorized operators safely operate their lift truck by emphasizing and illustrating the correct procedures. But, it cannot cover every possible situation that may result in an accident. You must watch for hazards in your work areas and avoid or correct them. While it is important that you know and understand the information in this manual, you must also know and follow your company safety rules! Be sure that your equipment is maintained in a safe condition. Do not operate a damaged truck. Practice safe operation every time you use your lift truck. Let's join together to set new standards in safety.

Remember, before you start operating this lift truck, be sure you understand all operating procedures. It is your responsibility, and it is important to you and your family, to operate your lift truck safely and efficiently. Be aware that the Federal Occupational Safety and Health Act (OSHA) and state laws require that operators be completely trained in the safe operation of lift trucks; if you think you need training, ask your supervisor.

CLARK lift trucks are built to take hard work, but not abuse. They are built to be dependable, but they are only as safe and efficient as the operator and the persons responsible for maintaining them. Do not make any repairs to this truck unless you have been trained in safe lift truck repair procedures and are authorized by your employer.

Contents of this Manual

This manual covers EC500 electric trucks with capacities of 3000 lbs (1500 kg) through 3500 lbs (1750 kg).

Introduction	vi
How to Use this Manual	viii
Safety Signs and Safety Messages	x
Truck Application	xi
Section 1. General Safety Rules	1-1
Section 2. Operating Hazards	2-1
Section 3. Know Your Truck	3-1
Section 4. Daily Safety Inspection	4-1
Section 5. Operating Procedures	5-1
Section 6. Emergency Towing	6-1
Section 7. Planned Maintenance	7-1
Section 8. Specifications	8-1
Index	Index-1

Introduction

CLARK welcomes you to the growing group of professionals who own, operate, and maintain CLARK lift trucks. We take pride in the long tradition of quality products and superior value that the CLARK name represents. This manual familiarizes you with safety, operating, and maintenance information about your new lift truck. It has been specially prepared to help you use and maintain your CLARK lift truck in a safe and correct manner.

Your CLARK lift truck has been designed and built to be as safe and efficient as today's technology can make it. As manufactured, it meets all the applicable mandatory requirements of ANSI B56.1 -1988 Safety Standard for Powered Industrial Trucks. Each truck is also furnished with equipment to help you operate safely; for example, parking brake and horn are standard equipment.

Safe, productive operation of a lift truck requires both skill and knowledge on the part of the operator. The operator must know, understand, and practice the safety rules and safe driving and load handling techniques described in this manual. To develop the skill required, the operator must become familiar with the construction and features of the lift truck and how they function. The operator must also understand the lift truck's capabilities and limitations, and see that it is kept in a safe condition.

Routine Servicing and Maintenance

Regular maintenance and care of your lift truck is not only important for economy and utilization reasons; it is essential for your safety. A faulty lift truck is a potential source of danger to the operator and to other personnel working near it. As with all quality equipment, keep your lift truck in good operating condition by following the recommended schedule of maintenance.

User Daily Inspection — Safety and Operating Checks

A lift truck should always be examined by the user, before driving, to be sure it is safe to operate. The importance of this procedure is emphasized in this manual with a brief illustrated review and later with more detailed instructions. CLARK dealers can supply copies of a helpful "Driver's Daily Checklist."

Planned Maintenance

In addition to the daily user inspection, CLARK recommends that a planned maintenance and safety inspection program (PM) be performed by a trained and authorized mechanic on a regular basis. The PM will provide an opportunity to make a thorough inspection of the safety and operating condition of your lift truck. Necessary adjustments and repairs can be done during the PM, which will increase the life of components and reduce unscheduled downtime. The PM can be scheduled to meet your particular application and lift truck usage.

The procedures for a periodic planned maintenance program that covers inspections, operational checks, cleaning, lubrication, and minor adjustments are outlined in this manual. Your CLARK dealer is prepared to help you with a Planned Maintenance Program with trained service personnel who know your lift truck and can keep it operating safely and efficiently. For additional information, see your *Service Manual*.

How to Use this Manual

This manual is a digest of essential information about the safe operation of your lift truck. It acquaints you with your lift truck's features, their function, and their maintenance. This manual is organized into eight major part:

Section 1, "General Safety Rules," reviews and illustrates accepted practices for safe operation of a lift truck.

Section 2, "Operating Hazards," warns of conditions that could cause damage to the truck or injury to the operator or other personnel.

Section 3, "Know Your Truck," describes the major operating components, systems, controls, and other features of your truck and tells how they function.

Section 4, "Daily Safety Inspection," presents details on how to perform the operator's daily safety inspection.

Section 5, "Operating Procedures," discusses more specific instructions on the safe, efficient operation of your lift truck.

Section 6, "Emergency Towing," gives instructions for towing your truck, should it becomes necessary.

Section 7, "Planned Maintenance," describes the PM program.

Section 8, "Specifications," provides reference information and data on features, components, and maintenance items.

Also, the **Index** helps you locate information about various topics.

NOTICE: The descriptions and specifications included in this manual were in effect at the time of printing. CLARK Material Handling Company reserves the right to make improvements and changes in specifications or design, without notice and without incurring obligation. Please check with your authorized CLARK dealer for information on possible updates or revisions.

The examples, illustrations, and explanations in this manual should help you improve your skill and knowledge as a professional lift truck operator and take full advantage of the capabilities and safety features of your new lift truck.

The first Section of the manual is devoted to a review, with illustrations and brief messages, of general safety rules and the major operating hazards you can encounter while operating a lift truck. Next, you will find descriptions of the components of your specific lift truck model and how the instruments, gauges, and controls operate. Then, you will find a discussion of safe and efficient operating procedures, followed by instructions on how to tow a disabled lift truck. The later Sections of the manual are devoted to maintenance and truck specifications.

Take time to carefully read the "Know Your Truck" Section. By acquiring a good basic understanding of your truck's features, and how they function, you are better prepared to operate it both efficiently and safely.

In "Planned Maintenance," you will find essential information for correct servicing and periodic maintenance of your truck; including charts with recommended maintenance intervals and component capacities. Carefully follow these instructions and procedures.

Each major Section has its own table of contents, so that you can find the various topics more easily. If you cannot find a topic in the table of contents, check the index at the back of the manual.

We urge you to first carefully read the manual from cover to cover. Take time to read and understand the information on general safety rules and operating hazards. Acquaint yourself with the various procedures in this manual. Understand how all gauges, indicator lights, and controls function. Please contact your authorized CLARK dealer for the answers to any questions you may have about your lift truck's features, operation, or manuals.

Operate your lift truck safely; careful driving is your responsibility. Drive defensively and think about the safety of people who are working nearby. Know your truck's capabilities and limitations. Follow all instructions in this manual, including all IMPORTANT, CAUTION, WARNING, and DANGER messages to avoid damage to your lift truck or the possibility of any harm to yourself or others.

This manual is intended to be a permanently attached part of your lift truck. Keep it on the truck as a ready reference for anyone who may drive or service it. If the truck you operate is not equipped with this manual, ask your supervisor to obtain one and have it attached to the truck. And, remember, your CLARK dealer is pleased to answer any questions about the operation and maintenance of your lift truck and will provide you with additional information should you require it.

Safety Signs and Safety Messages

Improper operation can cause accidents. Don't take chances with incorrect or damaged equipment. **Read** and **understand** the procedures for safe driving and maintenance outlined in this manual. Don't hesitate to ask for help. **Stay alert!** Follow safety rules, regulations, and procedures. Avoid accidents by recognizing dangerous procedures or situations before they occur. **Drive and work safely** and follow the safety signs and their messages on the truck and in this manual.

Safety signs and messages are placed in this manual and on the truck to provide instructions and identify specific areas where potential hazards exist and special precautions should be taken. Know and understand the meaning of these instructions, signs, and messages. Damage to the truck, death, or serious injury to you or other persons may result if these messages are not followed. If warning decals are damaged, they must be replaced. Contact your CLARK dealer for replacements.

NOTICE

This message is used when special information, instructions or identification is required relating to procedures, equipment, tools, pressures, capacities and other special data.

IMPORTANT

This message is used when special precautions should be taken to ensure a correct action or to avoid damage to or malfunction of the truck or a component.



CAUTION

This message is a reminder of safety practices that can result in personal injury if proper precautions are not taken.



WARNING

This message indicates a hazard exists that can result in injury or death if proper precautions are not taken.



DANGER

This message is used when an extreme hazard exists.

Truck Application

The EC500 S30/S35 is a cushion (solid) tire truck designed for use indoors on smooth, dry surfaces.



Each truck is designed for a specific application. Make sure you use the correct truck for the job.

General Safety Rules

Contents

Daily Inspection	1-2
Do's and Don'ts	1-3
Seat Belts	1-4
Tip Over	1-4
No Riders	1-5
Pedestrians	1-6
Operator Protection	1-7
Fork Safety	1-8
Pinch Points	1-9
Travel	1-10
Grades, Ramps, Slopes, and Inclines	1-11
Surface and Capacity	1-12
Loading Docks	1-13
Parking	1-14

Daily Inspection

At the beginning of each shift, inspect your truck and fill out a daily inspection sheet.

Check for damage and maintenance problems.

Have repairs made before you operate the truck.



Do not make repairs yourself. Lift truck mechanics are trained professionals. They know how to make repairs safely.

Do's and Don'ts



DON'T MIX DRUGS OR
ALCOHOL WITH YOUR JOB.

DO WATCH FOR PEDESTRIANS




DON'T BLOCK SAFETY OR
EMERGENCY EQUIPMENT

DO WEAR SAFETY
EQUIPMENT WHEN
REQUIRED



DON'T SMOKE IN
"NO SMOKING"
AREAS

Seat Belts

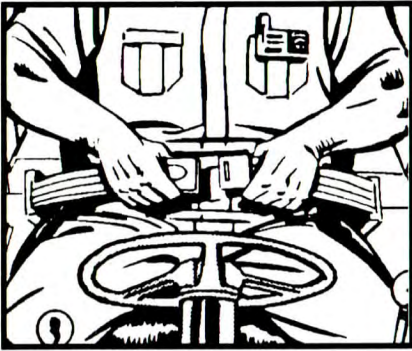

Make sure your seat belt is buckled at all times.

Seat belts can reduce injuries.


ALWAYS BUCKLE UP

Tip Over



If your truck starts to tip over, **DO NOT JUMP!!!** Your chances for survival in a tip-over are better if you stay with the truck, in your seat. Brace yourself as illustrated above.

No Riders

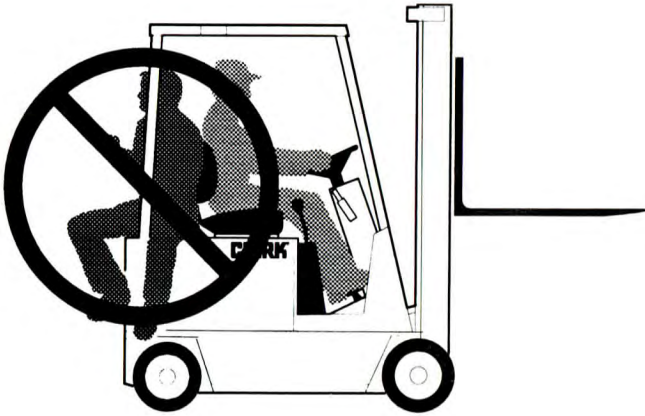


The operator is the only one who should be on the truck.



Never transport personnel on the forks of a lift truck.

Pedestrians

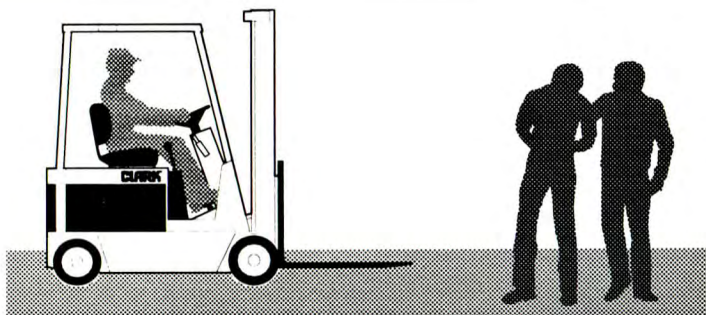

Watch where you are going; look in the direction of travel. Pedestrians may use the same roadway you do. Sound your horn at all intersections or blind spots.





Watch for people in your work area, even if your truck is equipped with warning lights or alarms. They may not watch for you.





Make people stand back, even when you are parked.

Operator Protection

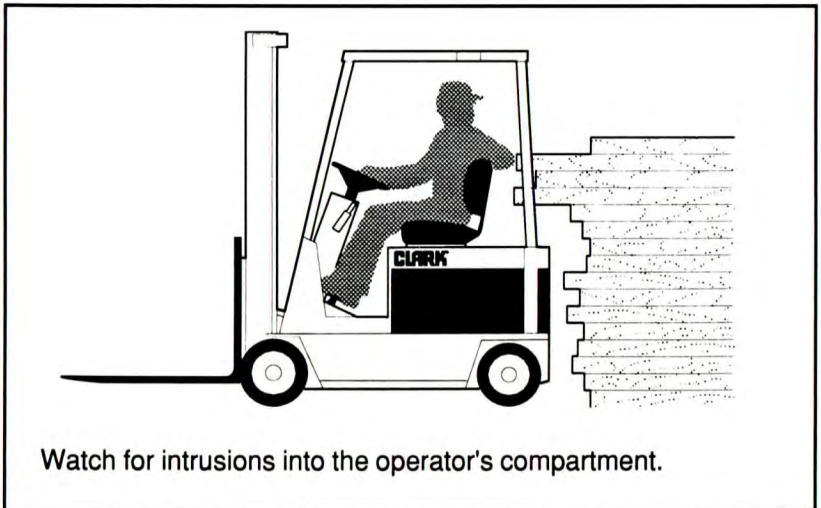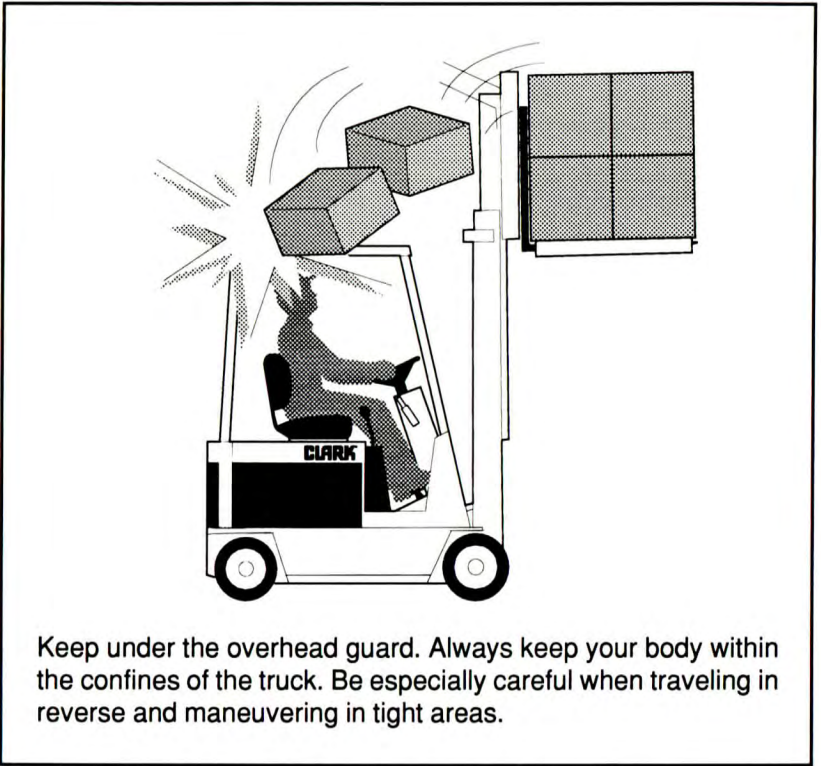


Fork Safety

Never allow anyone to walk under raised forks.

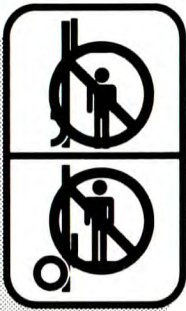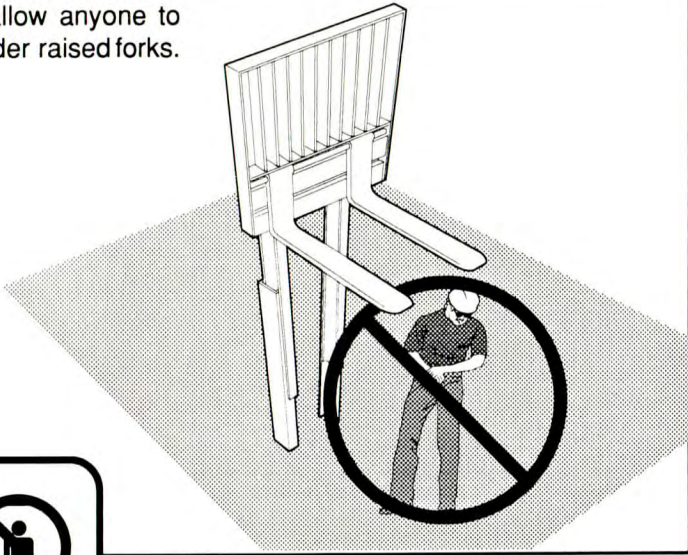


DANGER

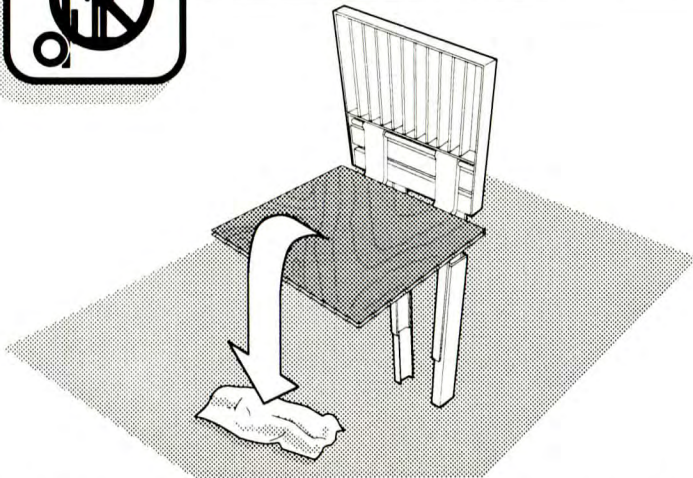

Use special equipment to raise people for overhead work.
DO NOT USE FORK LIFT TRUCKS.


Pinch Points

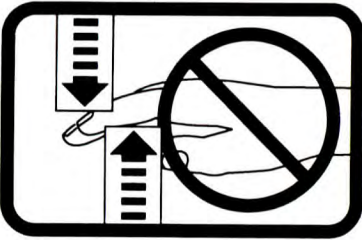


Keep hands, feet, and legs out of upright.



Do not use the upright as a ladder.


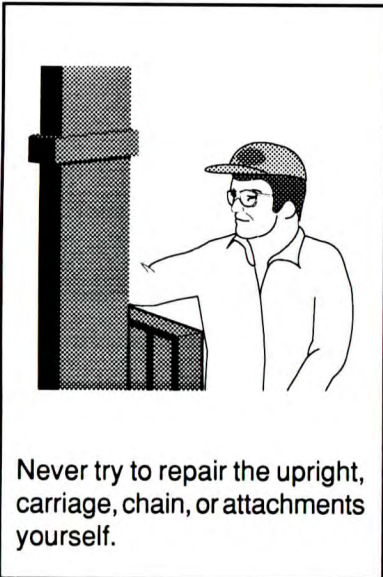


Never try to repair the upright, carriage, chain, or attachments yourself.



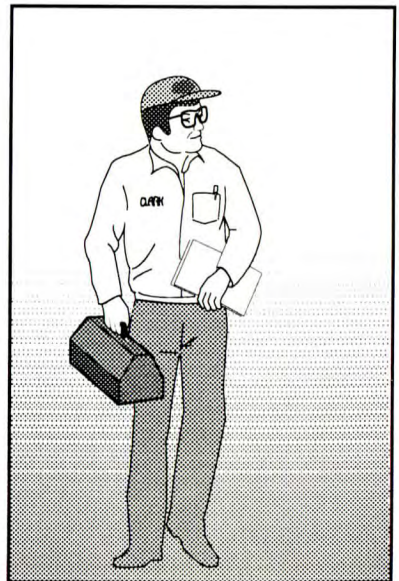


Always get a trained mechanic.


Travel

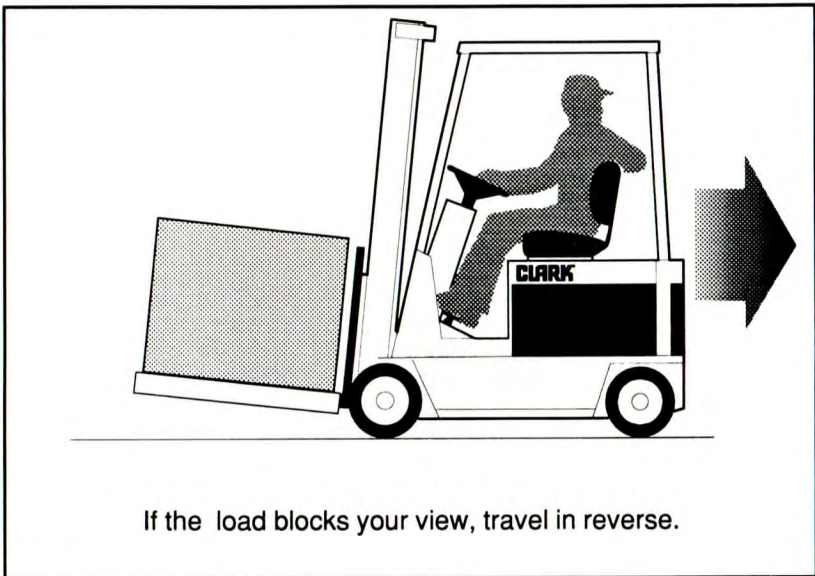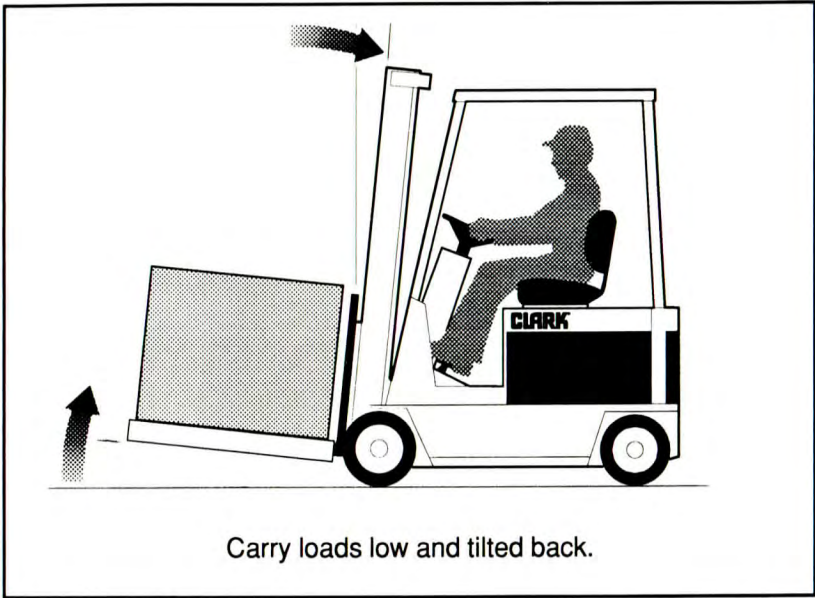

Grades, Ramps, Slopes, and Inclines

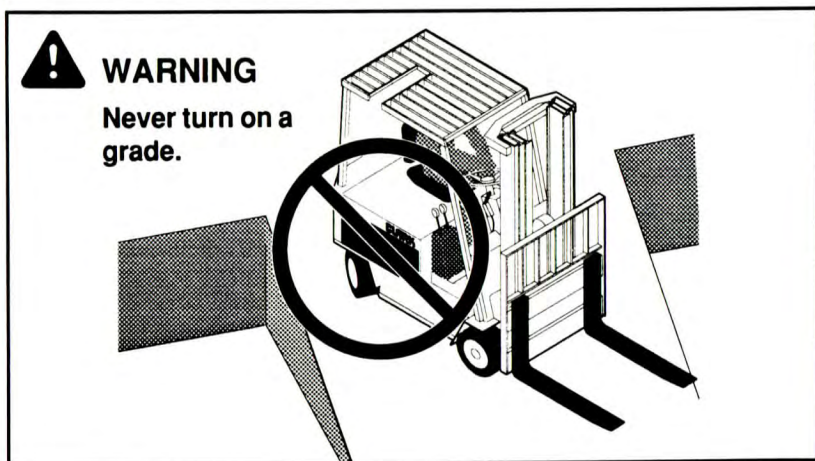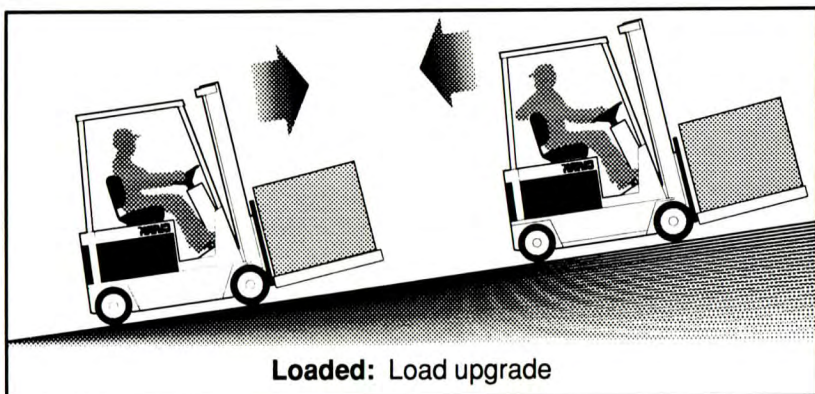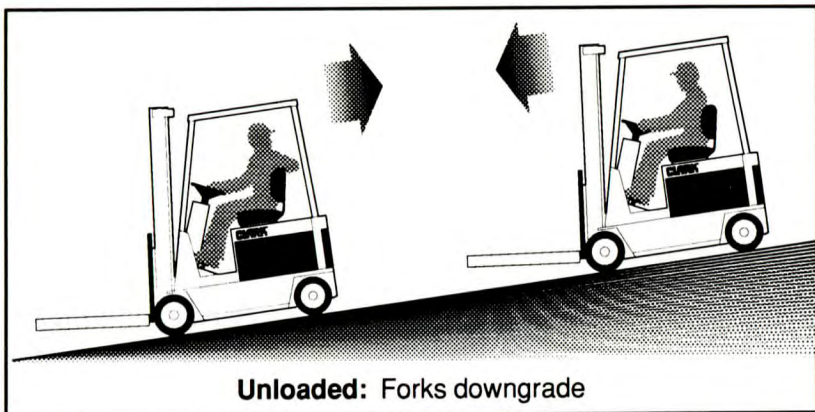


Surface and Capacity

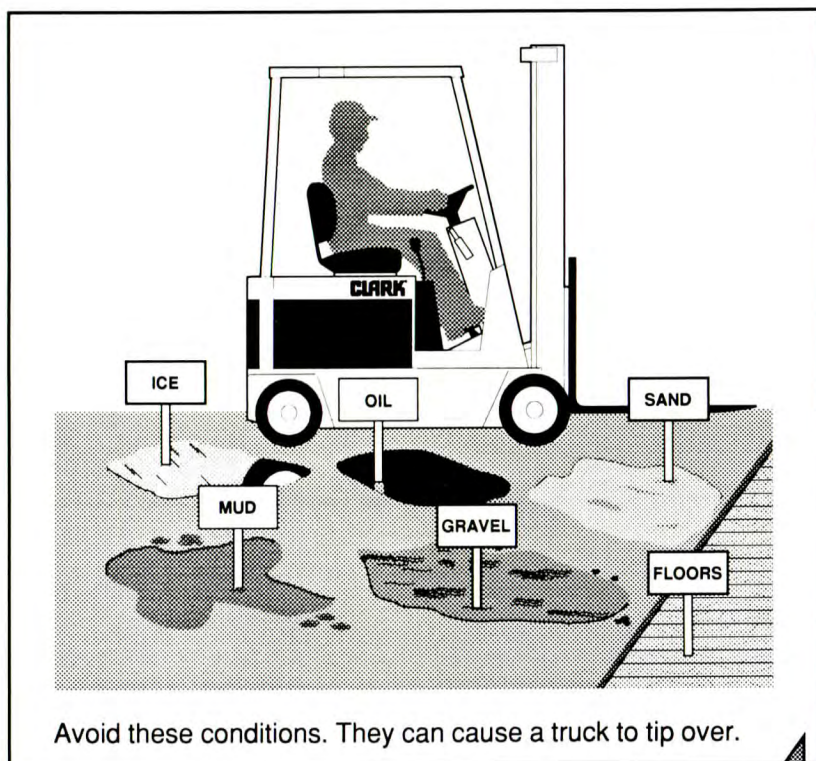

Know the weight of your truck and its load. Check capacities.



Loading Docks

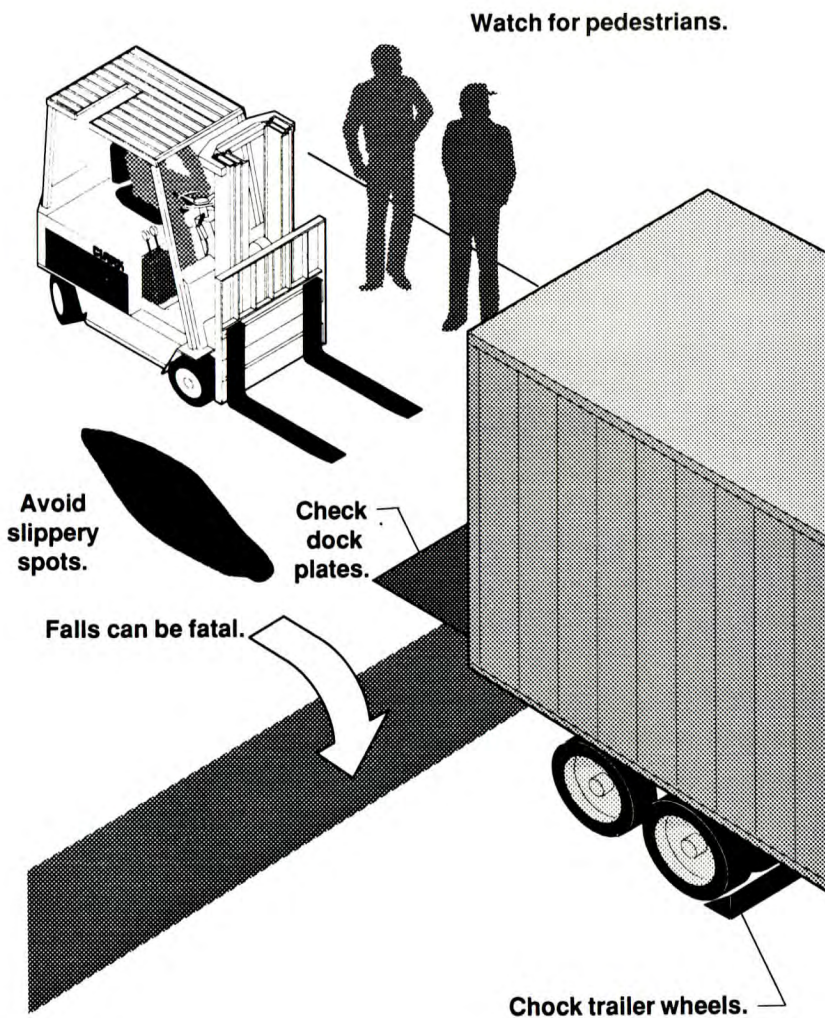


Parking

Never park on a grade.



F
N
R

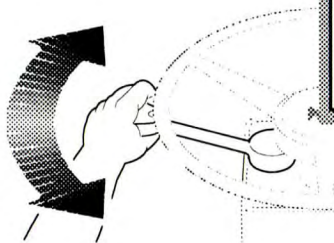

Be sure that the direction control is in NEUTRAL.

OFF

ON




Turn the key to the OFF position.

Lower the forks fully to the floor and tilt them forward.



ON

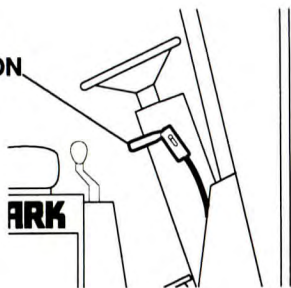


Set the parking brake.

Operating Hazards

Contents

Loose Loads	2-2
Long and Wide Loads	2-3
Rear Swing	2-4
Low Overhead Clearance	2-5
Fast Turns and High Loads	2-6
Drop-Offs	2-7
Right-Angle Stacking	2-8
Chain Slack	2-9
Pallets and Skids	2-10
U.L. Construction Type	2-11

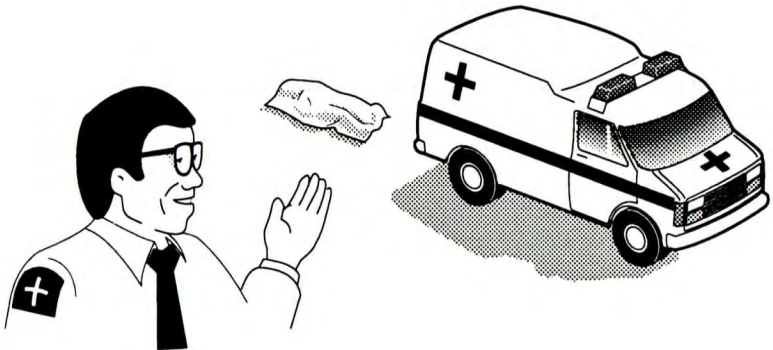




This Section points out hazards that may cause you, or someone around you, to be killed or badly hurt. As the operator, you must look for other hazards. Get your supervisor to help you identify and avoid those hazards.

Loose Loads




WARNING

Loose or unbalanced loads are dangerous. Observe these precautions.

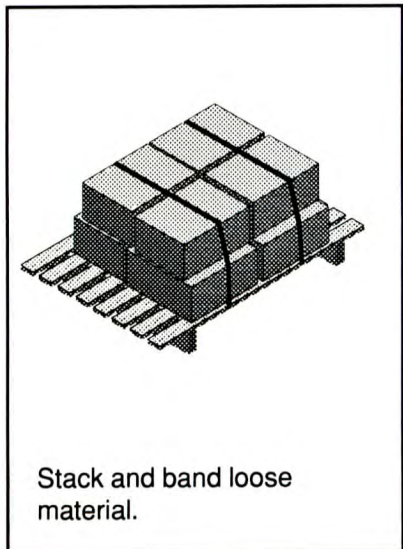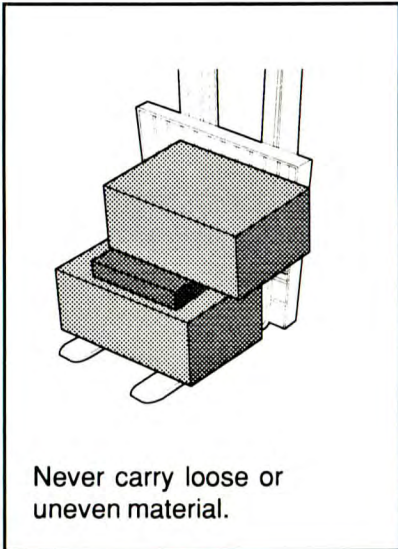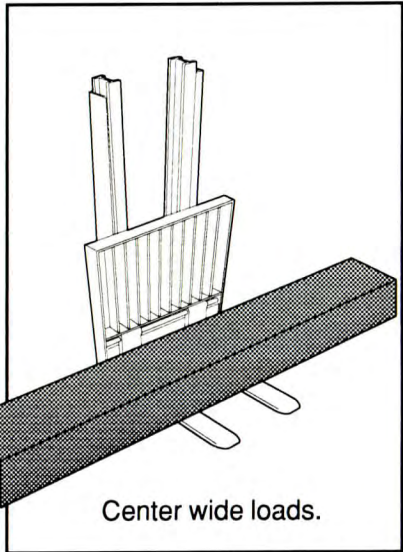


Long and Wide Loads

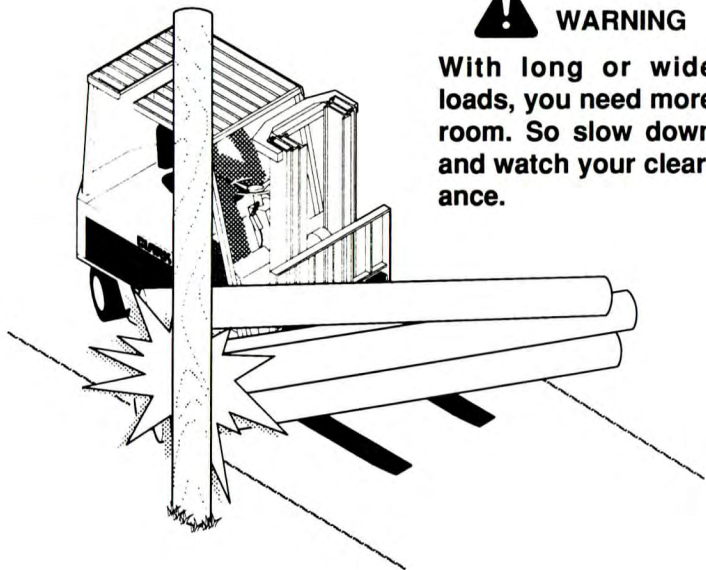

WARNING


With long or wide loads, you need more room. So slow down and watch your clearance.

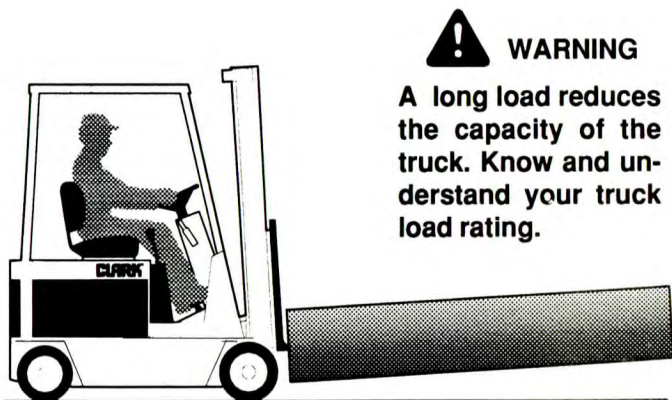

WARNING


A long load reduces the capacity of the truck. Know and understand your truck load rating.

Rear Swing

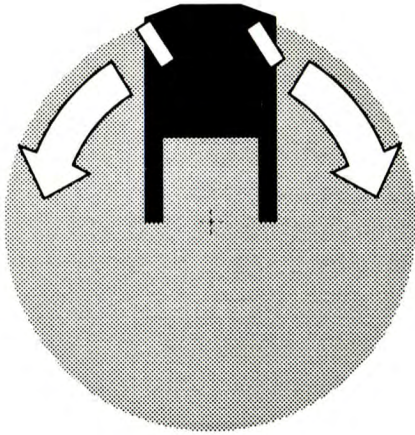

WARNING

When turning, be sure the rear end of the truck does not swing into racks, posts, etc.

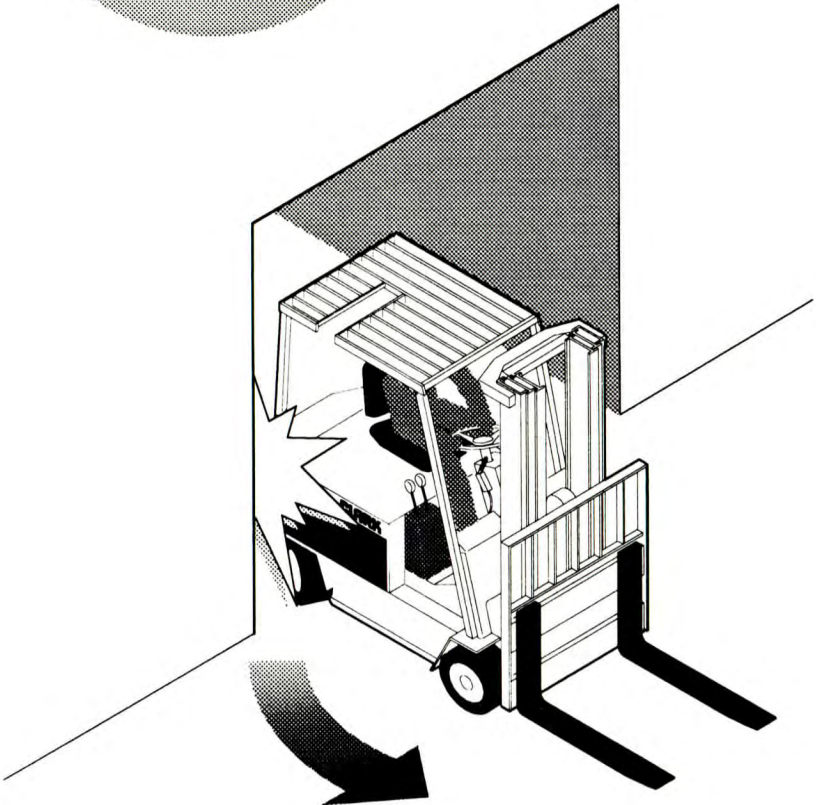



Low Overhead Clearance




WARNING

Watch overhead:
Moving into overhead
structures can tip a
truck over.

**Know the height of
your truck. Check
your clearance. Keep
loads low and tilted
back.**

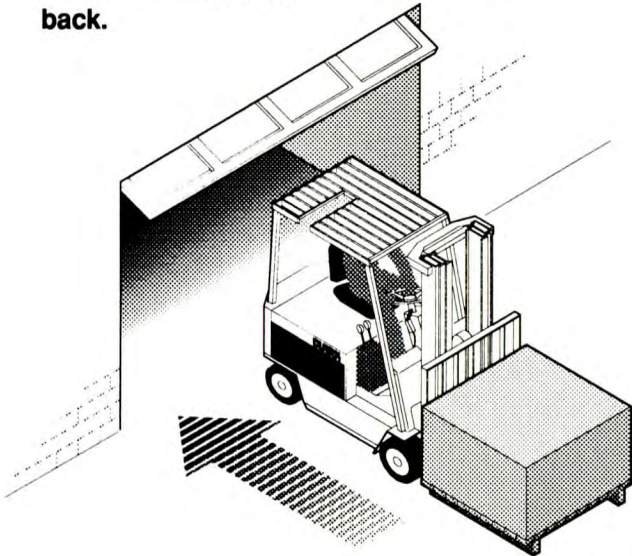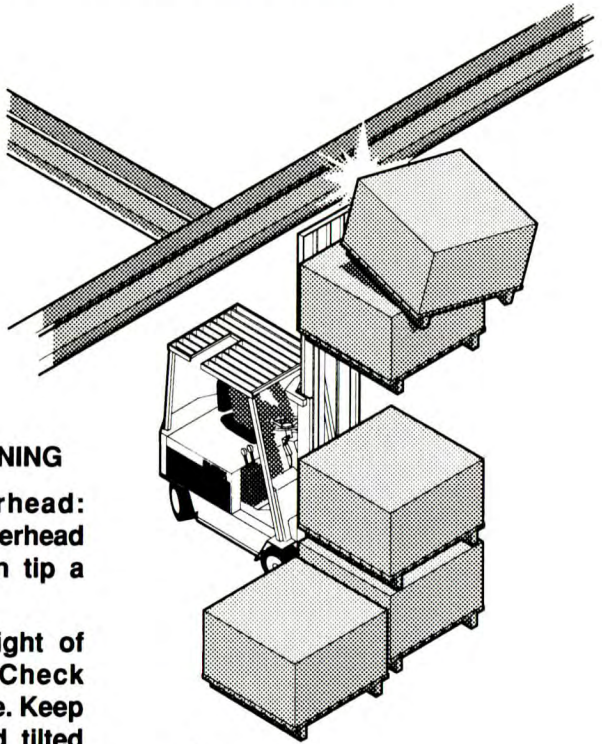

Fast Turns and High Loads

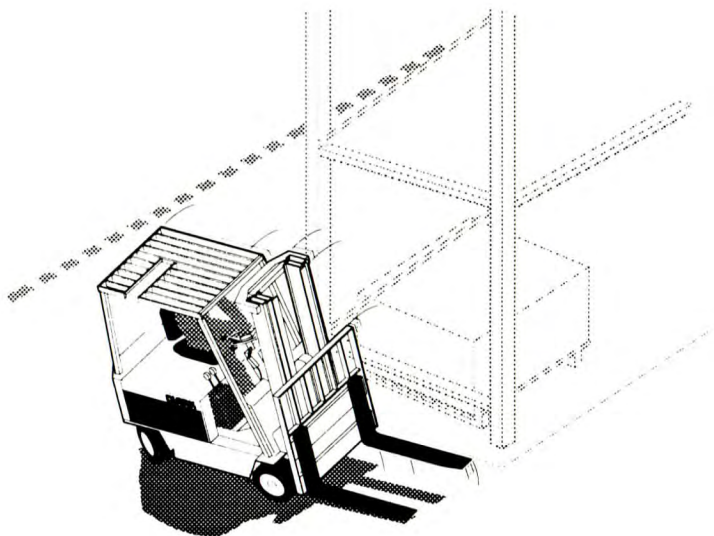


WARNING

Slow down before turning; the truck can tip over.




WARNING

Turn too sharply with a raised load and your truck can tip, even at slow speeds. Travel with the load raised only when removing or depositing a load.

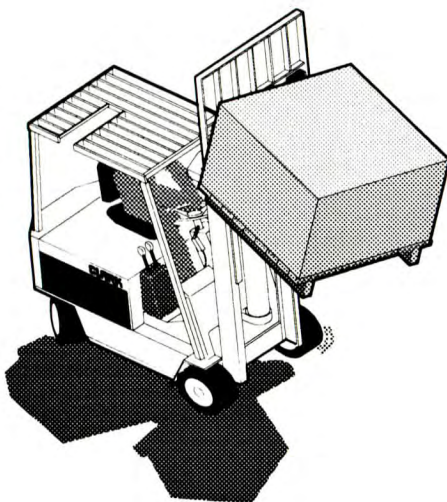

Drop-Offs

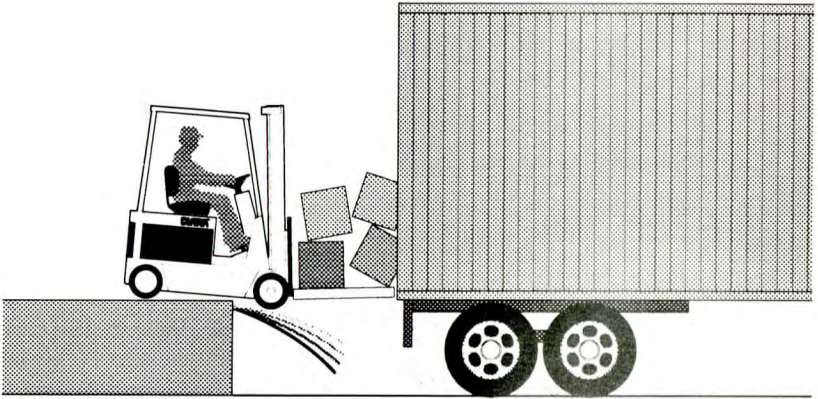


WARNING


To avoid these hazards, you must:

- Talk to the truck driver yourself; make sure the driver does not move the trailer until you are done!
- Apply trailer brakes.
- Use wheel chocks.
- Use trailer-to-dock locking systems, if available.

The impact of moving in and out of a trailer may cause the trailer to move.

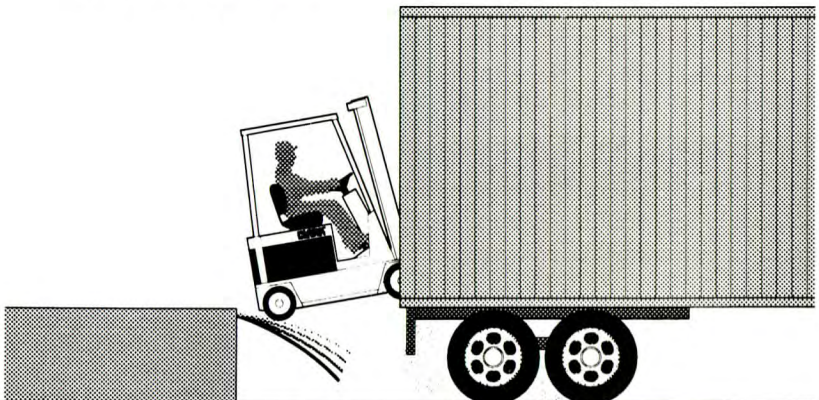

Right-Angle Stacking

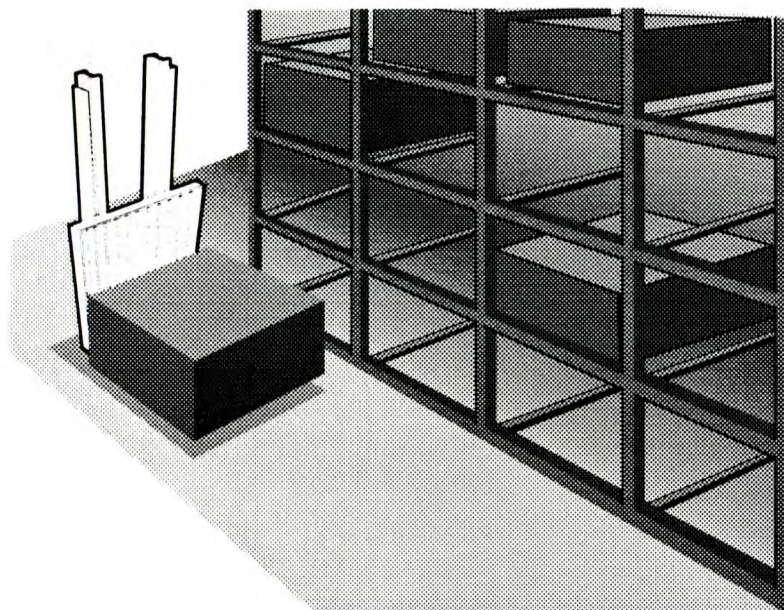


SLOWLY



WARNING

When right-angle stacking or moving with a raised load to clear low objects, move slowly and avoid sharp turns.


Chain Slack

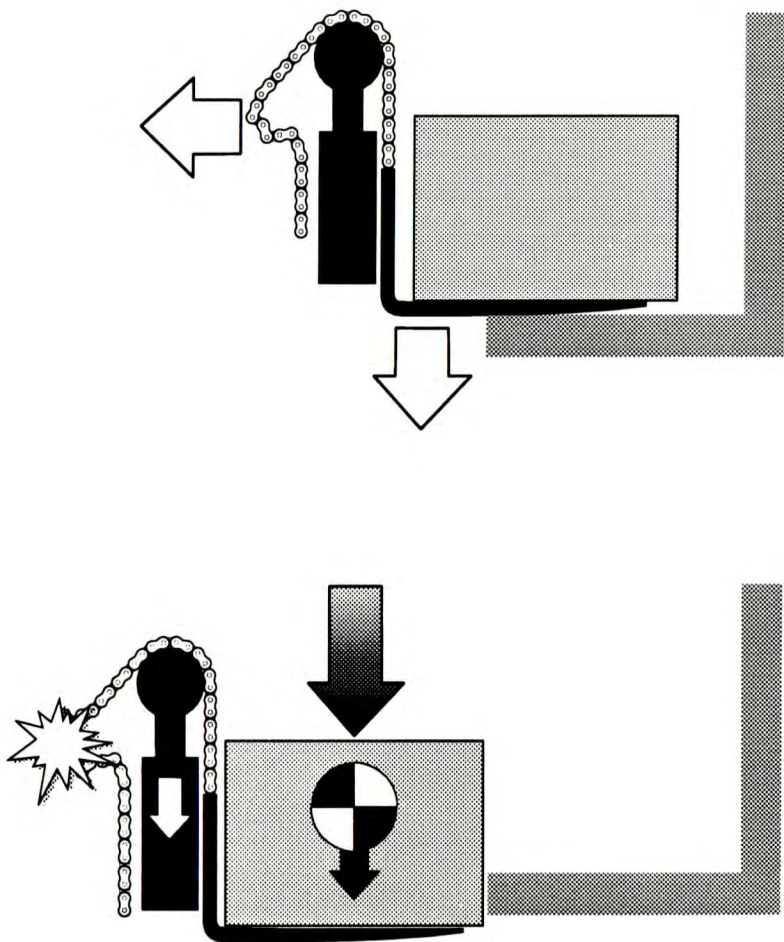

WARNING

Slack chains mean rail or carriage hang-up. Raise the forks before you move.


Pallets and Skids

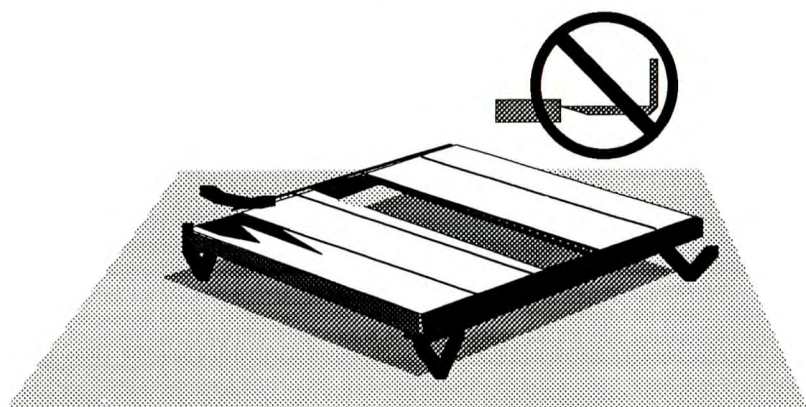

WARNING



Do not move or store materials on damaged pallets or skids. Items can fall through them causing severe injury or death!

Be sure the pallet or skid you are using is in good condition and does not have defective or missing components and fasteners.

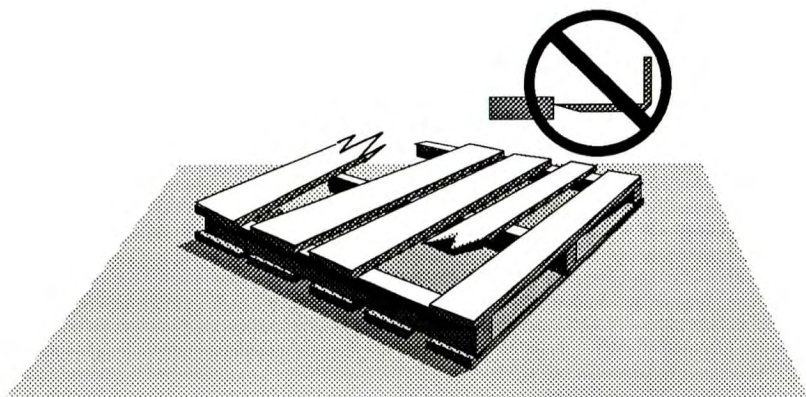

U.L. Construction Type

Know the U.L. construction type of your truck and make certain that trucks of this type may be operated in restricted areas before you enter. Never take an unauthorized truck into restricted or hazardous areas.

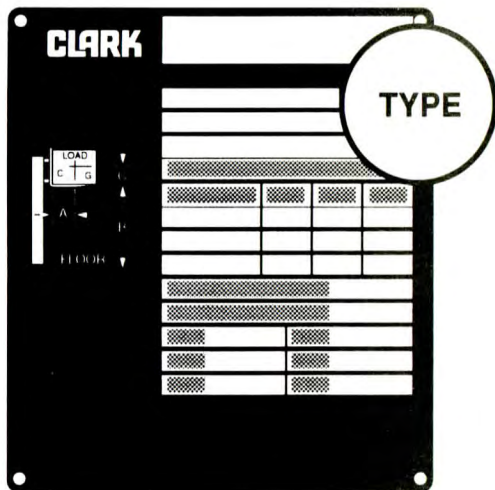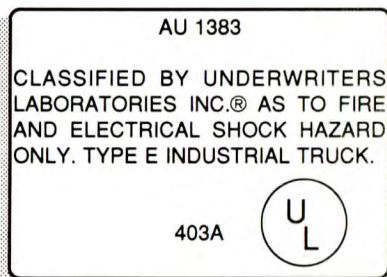




Know Your Truck

Contents

Truck Model Description	3-2
Nameplate and Safety Decals	3-3
Operator Compartment Layout	3-9
Key Switch	3-10
Diagnostic Display	3-10
Direction Control Lever	3-11
Accelerator Pedal	3-11
Hydraulic Service Brakes	3-12
Handwheel and Horn Button	3-12
Parking Brake	3-12
Lift, Tilt, and Auxiliary Control Levers	3-13
Seat Adjustment	3-14
Battery Compartment Access	3-14
Electrical Circuit	3-15
Main Hydraulic System	3-16
Power Steering System	3-16

Truck Model Description

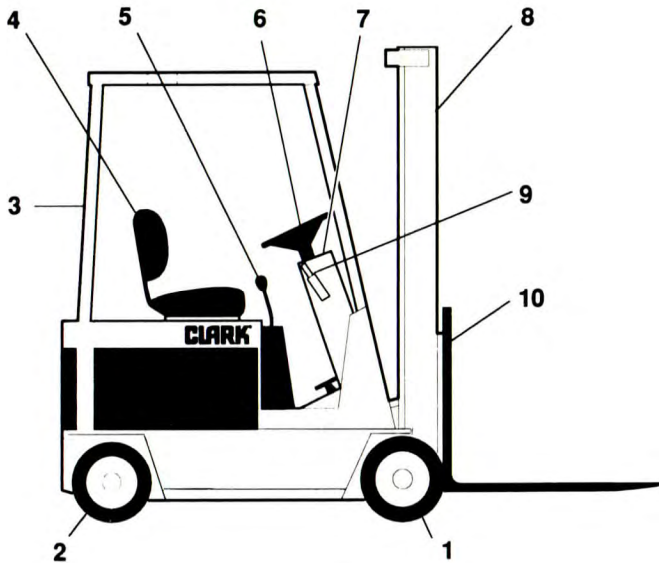


CLARK EC500 S30/S35

TRUCK TYPE: Electric Sit-Down Rider, 36/48 Volt, Cushion Tire, 3000 through 3500 lbs capacity.

1. Drive Axle, Cushion Tires, and Wheels
2. Steer Axle, Cushion Tires, and Wheels
3. Overhead Guard
4. Seat and Seat Belt
5. Lift, Tilt, and Auxiliary Levers
6. Steering Handwheel
7. Direction Control Lever
8. Upright
9. Parking Brake
10. Load Backrest Extension

Nameplate and Safety Decals

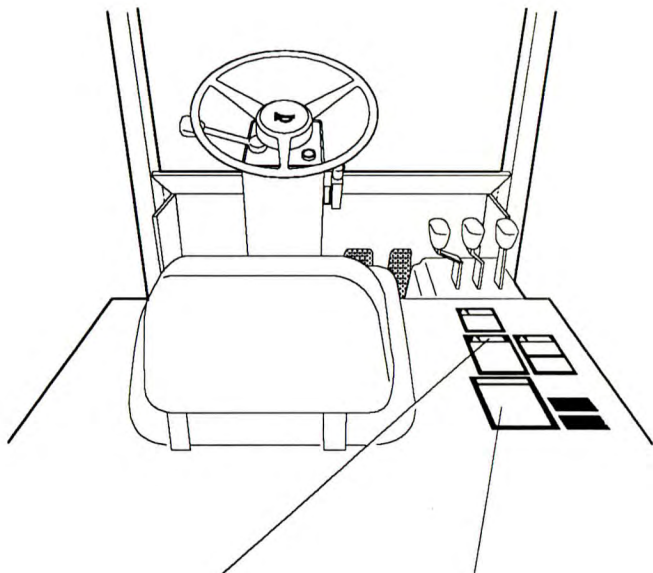

**Truck Data and Capacity Plate
(Truck Nameplate)**

**Operator Safety
Warning Decal**

Other safety and warning decals are placed in various conspicuous locations on the truck. Decals are provided to remind you of essential procedures or to prevent you from making an error that could damage the truck or possibly cause personal injury. It is important that you know, understand, and follow these instructions. Safety and warning decals should be replaced immediately if missing or defaced (damaged or illegible). Refer to the *Service Manual* for location of all decals.

NOTICE

NAMEPLATES AND DECALS: Do not operate a lift truck with damaged or lost decals and nameplates. Replace them immediately. They contain important information.

Truck Data and Capacity Plate (Nameplate)

CLARK

MODEL NO. [] TYPE []

SERIAL NO. []

ATTACHMENTS []

LOAD CENTER: A, B, C, D

FLOOR []

CAPACITY WITH ATTACH LISTED ABOVE OR WITH FORKS UPRIGHTS VERTICAL

LBS.	A	B	C
[]	[]	[]	[]
[]	[]	[]	[]
[]	[]	[]	[]

LESS BATT ELECTRICS []

WITH MAX BATT WT []

MAX	MIN
[]	[]
[]	[]

BATTERY: A-H [] NO []

LBS [] VOLTS []

FOR OTHER CAPACITIES CONSULT MANUFACTURER AS RELEASED FROM FACTORY CLARK TRUCKS MEET THE FOLLOWING DESIGN SPECIFICATIONS FOR POWERED INDUSTRIAL TRUCKS (I) AND IT MODELS, PART 3 AND B56.6 1978 ALL OTHER MODELS, PART 2 ANSI B56.1 1969 AND 1975 P/N 231978

Callouts: 1 (CLARK), 2 (TYPE), 3 (MODEL NO/SERIAL NO), 4 (ATTACHMENTS), 5 (Capacity table), 6 (LESS BATT ELECTRICS), 7 (WITH MAX BATT WT), 8 (BATTERY), 9 (LBS/VOLTS)

IMPORTANT

Know and understand the meaning of the data on your truck's nameplate.

1. Truck registered name.
2. Type designation. These code letters signify the type of construction with safeguards against fire, explosion, or electrical shock hazards for operation in nonclassified and classified areas. Check with the proper authority before entering areas where flammable or explosive material may be present.
3. Truck serial number and model number. Use these numbers when requesting information or ordering parts from an authorized CLARK dealer. The serial number is also stamped on the frame.
4. Attachment description (if any installed). The user must see that the truck is marked to identify the attachment(s), including the weight of the truck/attachment combination and truck capacity with the attachment.

IMPORTANT

When attachments are added or if the truck is modified, the capacity of the truck may be affected. Contact your authorized CLARK dealer for a new nameplate showing the revised capacity.


5. Capacity rating, load center, and lifting height data. This shows the maximum load capacity of this truck with relation to load

centers and fork heights. (See diagram on plate.) Personal injury and damage to the truck can occur if these capacities are exceeded. **Do not exceed maximum specified.**

- | | |
|-----------------------------|--------------------------------|
| 6. Truck weight, less load. | 8. Battery ampere-hour rating. |
| 7. Battery weight. | 9. System voltage. |

Safety Warning Decal

The operator's warning decal contains basic instructions for safe operation of a lift truck. Read and understand these instructions and other safety messages in this manual and on the lift truck.



WARNING

BREAKING THESE RULES WILL CAUSE SERIOUS OR FATAL INJURY TO YOURSELF AND OTHERS

- Do not operate this lift truck unless you are trained and authorized. Read and understand operator's manual before starting lift truck. Clark Dealers have replacement manuals.
- Do not operate damaged or faulty lift truck. Do not attempt repairs unless you are trained and authorized.
- Look where you drive. Watch out for people, obstructions (especially overhead), and drop-offs. If load blocks your view, drive backward, except up slopes.
- Lift trucks will tip over if not properly operated. Slow down before turning. Do not turn on slopes. Drive with forks or attachments fully lowered and tilted back. Check tires for correct pressure.
- Forks or attachments can fall rapidly if not properly controlled or maintained. Do not use this lift truck to raise people.
- Protect against falling objects. Overhead guard and load backrest extension must be in place.
- Do not load lift truck over capacity on nameplate. Move long, high, or wide loads carefully. Do not move unstable loads.
- Before getting off lift truck, lower forks or attachments all the way, put drive in neutral, turn off key, and set parking brake.


2387649

Seat Belt Warning Decal


This decal is located on the seat deck to remind the operator that staying in the seat provides the best chance of avoiding injury in the event of a truck tipping mishap.

Lift trucks can be tipped over if operated improperly. Experience with lift truck accidents has shown that the driver cannot react quickly enough to jump clear of the truck and overhead guard as the truck tips. To protect operators from severe injury or death in the event of a tip-over, it is best to be held securely in the seat.

So, please, always buckle up when operating your lift truck.

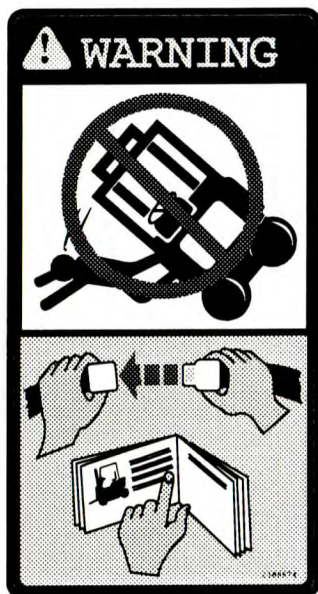

ALWAYS BUCKLE UP


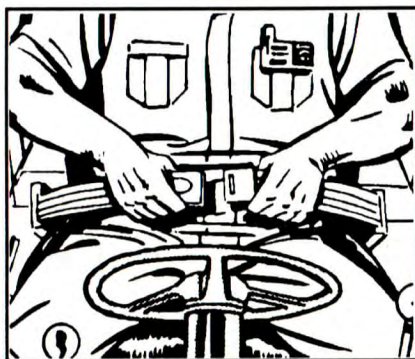


Seat belts can reduce injuries


Type Designation—U.L. Classification Label

Type designation is a system for identifying types of powered industrial trucks for operation in nonclassified and classified areas. The code letters (E, ES, EE) signify the type of construction with safeguards against fire, explosion, or electrical shock hazards in conformance with the requirements as prescribed by Underwriters Laboratories, Inc. The code appears on the U.L. classification label and on the truck nameplate.

Know the U.L. construction type of your truck and be certain that trucks of this type may be operated in restricted areas before entering. Never take an unauthorized truck into restricted or classified areas.

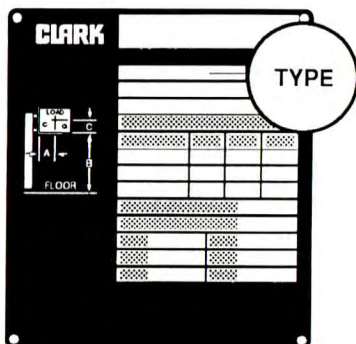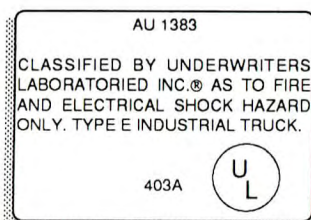


Parking Brake Caution Decal

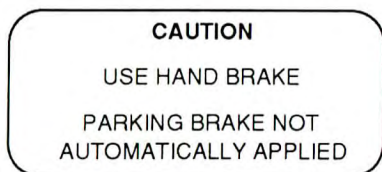


Upright Warning Decal

This safety decal is placed on the upright to warn of the danger of injury from movement between rails, chains, sheaves, fork carriage, and other parts of the upright assembly. Do not climb on or reach into the upright. Personal injury will result if any part of your body is put between moving parts of the upright.

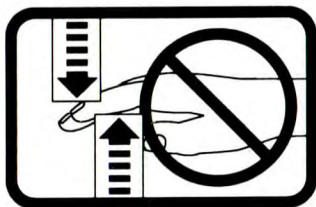

Keep Away from Forks Decal

This safety decal is placed on the upright to warn of the danger of injury from forks when they are in the raised position. Do not ride on or stand under forks or attachments. The forks can fall and cause injury or death. Always make sure that the forks are in the fully lowered position when they are not being used to handle a load.

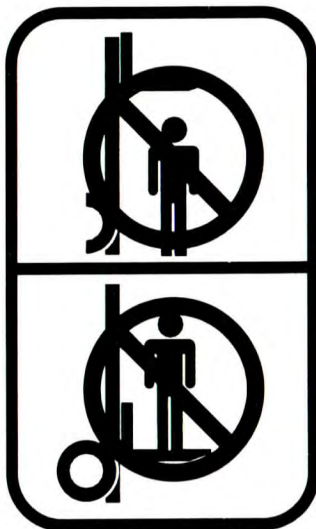


Battery Connector Warning Decal

This decal, next to the battery connector, warns you against connecting the battery with the key switch ON. Make sure the key switch is OFF, which helps prevent unexpected movement of the truck.



Operator Compartment Layout

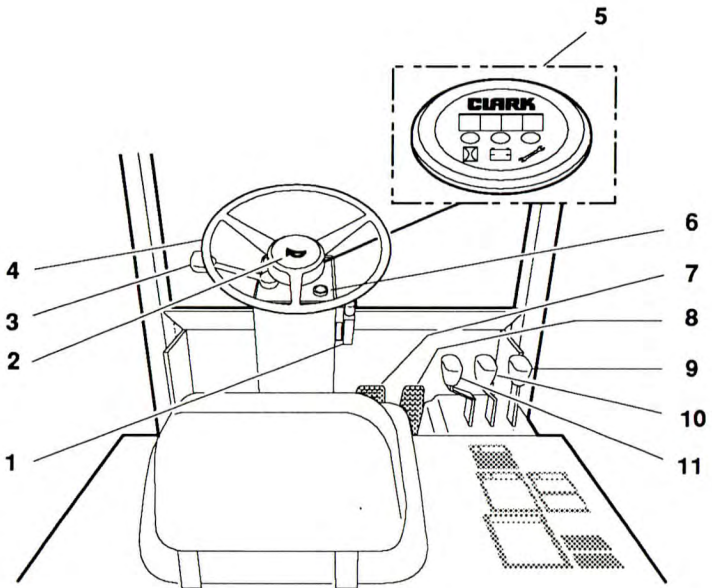

- | | |
|----------------------------|----------------------------|
| 1. Parking Brake Lever | 7. Brake Pedal |
| 2. Horn Button | 8. Accelerator Pedal |
| 3. Direction Control Lever | 9. Auxiliary Control Lever |
| 4. Steering Handwheel | 10. Tilt Control Lever |
| 5. Diagnostic Display | 11. Lift Control Lever |
| 6. Key Switch | |


Familiarize yourself with the controls and follow safe operating rules.

Key Switch

The key switch connects the battery with all truck operating systems (drive, lift, and steer electrical circuits) except the horn.

The key switch must be in the ON position for the truck to operate. When the key is in the vertical OFF position, all instrument, drive, and pump motor electrical circuits are disconnected (shut off), and the key can be removed.


The horn should operate at all times, if an adequately charged battery is connected to the truck.

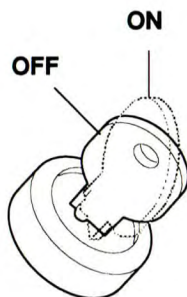

Diagnostic Display

The diagnostic display indicates the operating hours registered on the truck, the percentage of usable charge left on the battery, and fault codes. Battery charge or fault codes display when the key switch is ON. Hours registered display momentarily after the key switch is turned OFF. Lights above the three symbols indicate which type of information appears on the digital readout.


See Section 5, "Operating Procedures," for details.

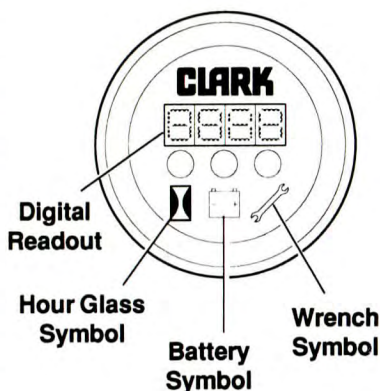

Direction Control Lever

Direction of travel is selected with a control on the left-hand side of the steering column. The control lever has three positions:

- **FORWARD**
- **NEUTRAL**
- **REVERSE**

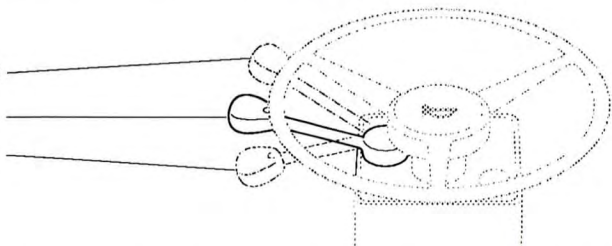


The control lever is held positively in each position by spring detents in the lever assembly. Selection of travel direction may be noted by visual check of the lever position.

NOTICE

The direction control lever must be in NEUTRAL for the truck to start.

Accelerator Pedal

With the accelerator pedal, you control travel speed and power. The accelerator pedal operates the accelerator control mounted directly beneath the floorboard.

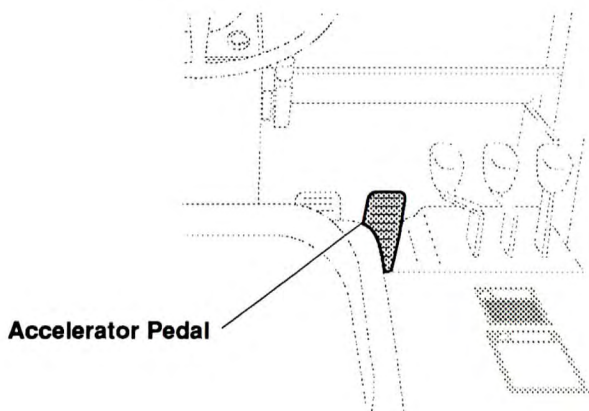

Hydraulic Service Brakes

The service brake pedal operates the master cylinder, which forces brake fluid into the hydraulic cylinders that operate drum-and-shoe brake assemblies within the drive axle. The brake fluid reservoir is part of the master cylinder and is located under the floor plate.




CAUTION

Never operate your lift truck with the service or parking brakes not working correctly.

Parking Brake


The parking brake is mounted to the right-hand side of the steering column and is cable-operated. When you pull (or push) the parking brake lever, the cable engages (or releases) a drum-and-shoe brake on the motor armature shaft.

Pull the lever toward you to apply the parking brake. The lever should snap-lock easily into the applied position, when correctly adjusted. Push the lever away from you to release the parking brake.

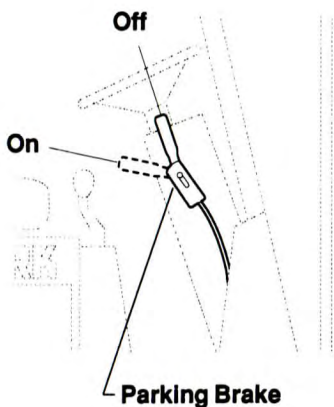

Handwheel and Horn Button

The horn button is located in the center hub of the steering handwheel and is electrically connected by contacts and wiring to the horn assembly.

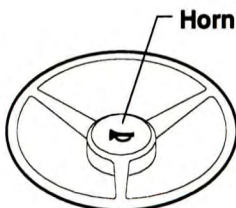


Lift , Tilt, and Auxiliary Control Levers

With the control levers, you operate the main hydraulic valve to raise or lower the fork carriage, tilt the upright, or control an optional attachment. The speed with which each device moves depends on how far you move its control lever from the center (NEUTRAL) position. When the device is in the desired position, you release its control lever; the device maintains its position and the control lever automatically returns to NEUTRAL.


Lift Control Lever

To lift the fork carriage, pull back on the lift control lever. To lower the carriage, push forward on the lift control lever. You can lower the fork carriage even if the key switch is OFF or the battery is disconnected.

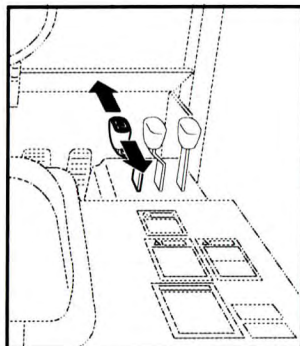

Tilt Control Lever


To tilt the upright forward, push forward on the tilt control lever. To tilt the upright backward, pull back on the tilt control lever.

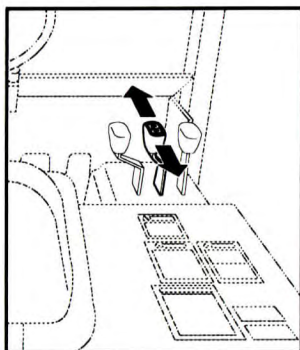

Auxiliary Control Lever


If your truck has a sideshifter or other optional attachment, you control it with the auxiliary control lever.

To control the sideshifter, for example, push the auxiliary lever forward to shift left; pull back to shift right.

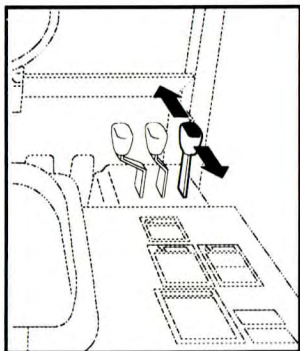


Seat Adjustment

The seat adjustment lever enables you to slide the base of the seat forward or backward. The seat adjustment lever is located on the right side under the seat. To unlock, push the lever to the left and adjust the seat so that you may reach all controls. Then release the lever. Be sure that the seat locking mechanism is engaged.

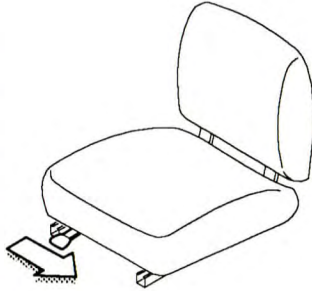

Battery Compartment Access

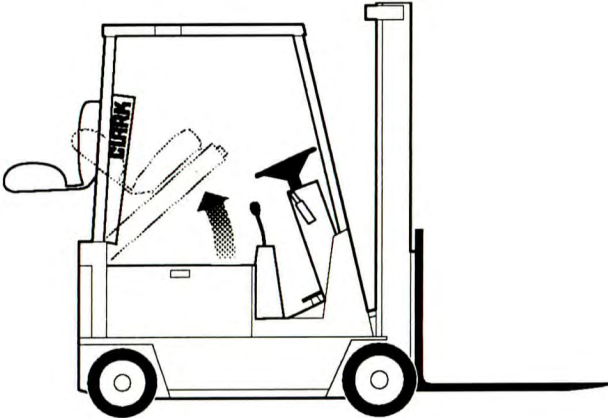

The combination seat deck/battery compartment cover pivots upward to provide access to the battery compartment. The cover is held closed by a spring latch located at the front edge. Pull the latch to release the cover. A gas spring helps you lift the cover and hold it in the raised position.

Electrical Circuit

The key switch must be ON before the drive motor, lift/tilt pump motor, and power steering pump motor can operate.

The electrical circuit is controlled by a microprocessor control unit. The circuit contains a variety of switches and sensors that detect the status of various truck components. The control unit reads this information and makes the truck respond accordingly. Circuit features of special interest to operators include:

- **Drive motor control switches:** Switches activated by the service and parking brake tell the control unit when the brakes are applied. The control unit will not allow the drive motor to run when either of the brakes are applied.
- **Power steering control switches:** Switches activated by the direction control lever tell the control unit when the truck is not in NEUTRAL. The control unit lets the power steering pump motor run only if the directional control lever is in FORWARD or REVERSE *and* the parking brake is released.
- **Lift pump control switches:** Switches activated by the lift, tilt, and auxiliary control levers tell the control unit the position of the levers. The control unit lets the lift pump run only when the lift control lever is moved to the RAISE position *or* the tilt control lever is out of the NEUTRAL position *or* the auxiliary control lever is out of the NEUTRAL position.
- **Static return to off (SRO) feature:** The SRO feature of the control unit requires the operator to place the direction control safely in NEUTRAL before beginning operation. When the parking brake switch or key switch is open (operator has set the brake or turned off the truck), the truck cannot be restarted until the direction control lever is returned to NEUTRAL.

If you try to start the truck with the direction control lever in FORWARD or REVERSE, the control unit displays a fault code of -02, -03, or -04 on the diagnostic display. You must place the direction control lever in NEUTRAL, then select a direction.

A fault code of -01 appears on the diagnostic display when the parking brake is applied and the key switch is ON.

Main Hydraulic System

The main hydraulic system consists of a hydraulic sump tank, main hydraulic pump and motor, main control valve, and associated hydraulic lines and hoses.

Oil from the hydraulic sump is fed by a gear pump through a filter to the main control valve. From the main control valve, the oil is directed to the lift cylinders, tilt cylinders, or back to the sump.

Power Steering System

The lift truck is equipped with a hydrostatic power steering system that has its own electric motor and pump. The power steering system draws oil from, and returns it to, the main hydraulic sump.

The steering handwheel operates a steering control valve that directs oil flow to the two-way steering cylinder on the steering axle. The steering control valve also acts as a pump that provides manual steering if the steer motor (steer pump flow) stops.



CAUTION

Never operate a lift truck that has a steering system fault.

Daily Safety Inspection

Contents

Inspecting Your Truck	4-2
Visual Checks	4-3
Functional Checks	4-4
Concluding the Inspection	4-5

NOTICE

The Occupational Safety and Health Act (OSHA) requires that truck users examine their trucks before each shift to be sure they are in safe working order. Defects, when found, shall be immediately reported and corrected. The truck shall be taken out of service until it has been restored to safe operating condition.

Inspecting Your Truck

Before using a lift truck, **it is the operator's responsibility** to check its condition and be sure it is safe to operate.

Check for damage and maintenance problems. Have repairs made before you operate the truck. Unusual noises or problems should be reported immediately to your supervisor or other designated authority.

Do not make repairs yourself unless you have been trained in lift truck repair procedures and authorized by your employer. Have a qualified mechanic correct all discrepancies using genuine CLARK or CLARK-approved parts.

Do not operate a truck if it is in need of repair. If it is in an unsafe condition, remove the key and report the condition to the proper authority. If the truck becomes unsafe in any way while you are operating it, **stop** operating the truck, report the problem immediately, and have it corrected.

Lift trucks should be inspected every eight hours, or at the start of each shift. In general, the daily inspection should include the **visual** and **functional checks** described on the following pages.

As an aid in carrying out this inspection, CLARK has prepared a form called the "**Driver's Daily Checklist.**" We recommend that you use this form to make a daily record of your inspections and truck condition. You may obtain copies of this form from your CLARK dealer.



WARNING

**Leaking hydraulic oil may be hot or under pressure.
When inspecting a lift truck:**

- **Wear safety glasses**
- **Do not check for leaks with bare hands.**

Visual Checks

First, perform a visual inspection of the truck and its major components:

1. Walk around your lift truck and take note of obvious damage that may have been caused by operation during the last shift.
2. Check that all capacity, safety, and warning plates or decals are attached and legible.
3. Check that the battery is installed and secured in position correctly. Check battery connector for safe condition.
4. Look for any external leakage around drive axle.
5. Check for hydraulic oil leaks and loose fittings. Do not use bare hands.
6. Be sure that the driver's overhead guard and any other safety devices are in place, undamaged, and attached securely.
7. Check all of the critical components that handle or carry the load.
8. Check the upright and lift chains. Check for obvious wear and maintenance problems such as damaged or missing parts, leaks, slack or broken chains, bent parts, and so on.
9. Carefully inspect the load forks for cracks, breaks, bending, twists, and wear. Be sure that the forks are correctly installed and locked in their proper position.
10. Inspect the wheels and tires for safe mounting and wear condition.

Functional Checks

Check the operation of the truck as follows:

NOTICE

Before performing these checks, familiarize yourself with the operating procedures in Section 5, "Operating Procedures."

1. Test warning devices, horn, lights, and other safety equipment and accessories.
2. With the truck on, check the diagnostic display. The diagnostic display should show the charge remaining on the battery or a fault code. If the fault code is not an operator fault code (described in Section 5, "Operating Procedures" under "Using the Diagnostic Display"), call a service technician.
3. Be sure all controls and systems operate freely and return to neutral properly. Check the:
 - Service and parking brakes
 - Hydraulic controls: lift, tilt, and aux functions (if installed)
 - Accelerator control
 - Directional control
 - Steering system.
4. Check hydraulic fluid level: With the truck parked on a level surface, lift the carriage to maximum height while listening for a high-pitched squeal. This sound, called "cavitation," indicates the fluid is low.

When the functional checks are completed:

1. Bring truck to a complete stop.
2. Put the directional control lever in the NEUTRAL position.
3. Apply the parking brake.
4. Turn the key switch to the OFF position.
5. Lower the lift mechanism fully.

If you are going to leave the truck unattended:


6. Remove the key.
7. Block the wheels if the truck has any possibility of moving.

Concluding the Inspection

Make a record on the "Driver's Daily Checklist" of all the operating and truck problems that you find. Review the checklist to be sure it has been completed and turn it in to the person responsible for lift truck maintenance. Be sure any unusual noises or problems are investigated immediately.

Do not operate a lift truck that has a maintenance problem, or is not safe to operate.

Remove the key from the ignition switch and put an "Out of Service" tag on the truck.

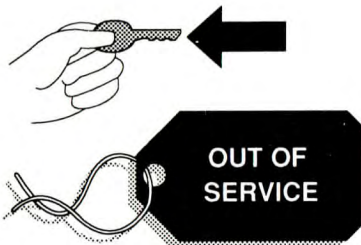

If all of the Daily Inspection checks were normal or satisfactory, the truck can be operated.


Operating Procedures

Contents

Before Operating the Truck	5-2
Starting from a Safe Condition	5-3
Adjusting the Seat	5-4
Buckling Up	5-4
Starting the Truck	5-4
Using the Diagnostic Display	5-5
Positioning Forks and Upright for Travel	5-7
Controlling Speed	5-7
Braking	5-7
Plugging	5-7
Operating Safely	5-8
Load Handling	5-12
Adjusting the Load Forks	5-12
Traveling with a Load	5-13
Picking Up and Moving Loads	5-14
Unloading	5-15
Stacking	5-16
Shut-Down Procedure	5-18

Before Operating the Truck

Be sure that you have read and understand the information in this *Operator's Manual* before operating the lift truck.

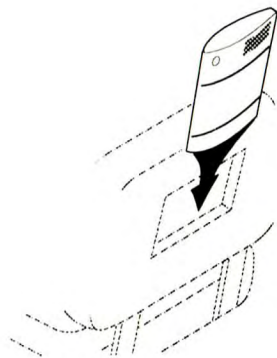

The *Operator's Manual* holder is located on the back of the seat. After you use the manual, always return it to the holder.



WARNING

- This truck can be dangerous if not used properly. Safe operation is the responsibility of the operator.
- Do not start or operate the truck, or any of its functions or attachments, from any place other than the designated operator's position.




CAUTION

- Inspect your lift truck before operating at the start of the day or shift. Before putting your truck to use, check the operation of the controls and all systems.
- Protect yourself. Do not operate the truck without a driver's overhead guard unless conditions prevent its use. Do not remove the overhead guard unless specifically authorized. Use special care if operation without this safety device is required.

Starting from a Safe Condition


Always start from a safe condition. Before operating a lift truck, make sure that:

1. You are seated in the truck and your seat belt is fastened.
2. The parking brake is applied.
3. The forks are fully lowered to the floor or ground.

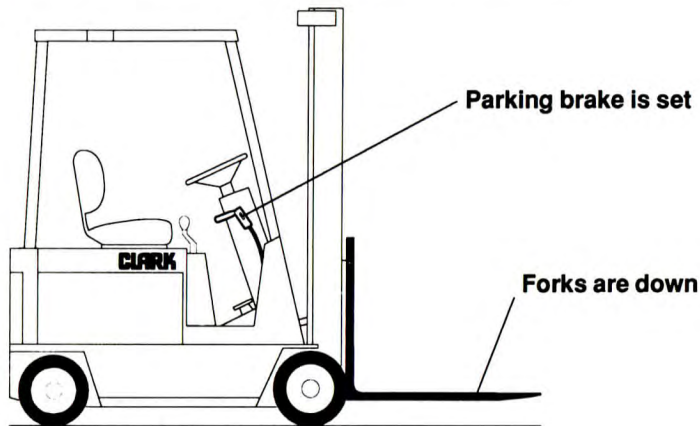

4. You are familiar with how all the controls function.
5. All controls are in neutral or other correct position.
6. The truck has received its daily inspection and is ready to operate.

Put the direction control lever in the NEUTRAL position, before you turn the key switch to ON. The truck should start only in the NEUTRAL position.

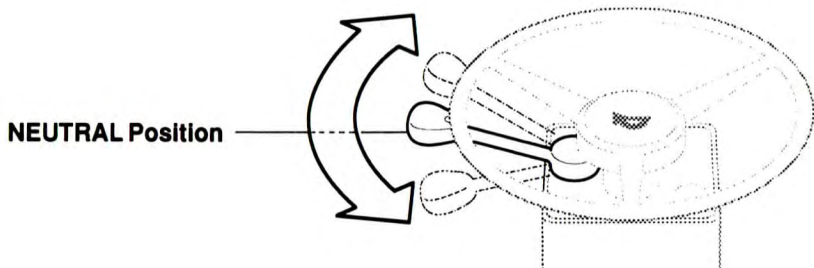

Adjusting the Seat

Adjust the seat to a comfortable position for you. Adjust the seat by moving and holding the release lever at the front edge of the seat. Put the seat in a position that will provide easy reach to all controls. Release the seat lever. Make sure that the seat locking mechanism is engaged.



CAUTION

Never adjust the driver's seat while the truck is moving, to avoid the possibility of loss of control and of personal injury.


Buckling Up

Buckle up. Be sure that you put on the seat belt. Connect and adjust the seat belt strap to a snug, comfortable position.



WARNING

Always wear your seat belt when operating a lift truck.

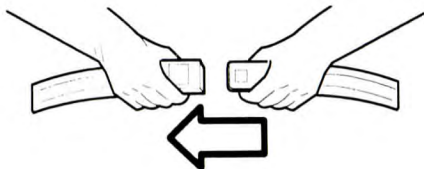

Starting the Truck

Before you start the truck, make sure that the direction control is in NEUTRAL and that you have taken all the above-mentioned precautions. To start the truck, turn the key switch clockwise to the ON position.

Using the Diagnostic Display

When you turn the key switch to ON, "8888" should display on the digital readout for about one second. This indicates that the digital readout is OK. Then, either the battery symbol light or the wrench symbol light should come on.

If the battery symbol light comes on, the digital readout shows the percentage of charge remaining on the battery. When the remaining charge registers as 20% or less, the readout flashes. At 10% remaining charge, the lift and tilt functions become inoperable.

If the wrench symbol light comes on, a fault code appears on the digital readout. The fault code may indicate an easily correctable "operator fault" or it may indicate that you need to have the truck serviced.

If you see a fault code, use the table below as a guide. Codes -01 through -06 are usually the operator fault codes. Any other code is a service code.

Code	Condition	Likely Corrective Action
-01	Parking brake switch open	Release parking brake.
-02	Truck in FORWARD when key turned ON	Put direction control in NEUTRAL before starting.
-03	Truck in REVERSE when key turned ON	Put direction control in NEUTRAL before starting.
-04	Truck in either FORWARD or REVERSE	Put direction control in NEUTRAL before starting.
-05	Brake and accelerator depressed at same time	Use only one at a time.
-06	Accelerator depressed with NEUTRAL selected	Select direction first.
Other	Truck needs service	Call service technician.


When you return the key switch to the OFF position, the hourglass symbol light should come on, and the hours registered on the truck should appear on the digital readout for about four seconds.

Positioning Forks and Upright for Travel

When driving, with or without a load, it is good practice to always raise the forks slightly and tilt the upright (forks) backward. Raising the forks and tilting them back prevents the fork tips from catching on possible obstructions and reduces the wear on the fork blades from striking or dragging on the floor or ground. See the NOTICE and CAUTION below.


Pull back on the lift control lever and raise the forks 6 to 8 inches (152 to 203 mm) above the floor. Then, using the tilt control, tilt the upright back slightly to raise the fork tips.

Lift

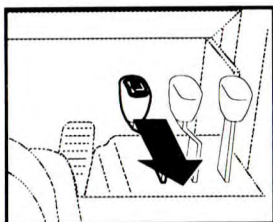

The amount of forward and rearward tilt to be used is governed by the application.

Tilt Back

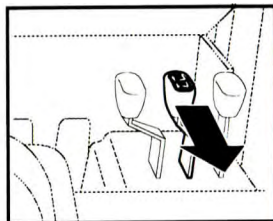

NOTICE

When the upright (carriage and/or load) is raised into a high (elevated) position, the stability of the truck is reduced. Some of the other conditions that may affect stability are: ground and floor conditions, grade, speed, loading, dynamic and static forces, and the judgement exercised by the operator. Trucks equipped with attachments behave as partially loaded trucks even when operated without a load on the attachment. Also, improper operation, faulty maintenance, or poor house-keeping may contribute to a condition of instability.



CAUTION


For stability, do not travel with the load or carriage in a highly elevated position. Travel with the lift mechanism raised only enough to clear the ground or obstacles.

Controlling Speed

With the direction control in FORWARD or REVERSE and the parking brake released, put your foot on the accelerator pedal and push down smoothly until the truck is moving at the desired speed.

Braking

To stop the truck, lift your foot from the accelerator pedal and put it on the brake pedal. Push down on the brake pedal in a smooth, firm motion until the truck is stopped.

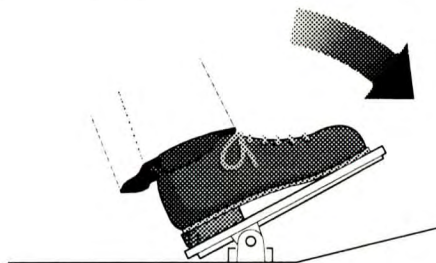

IMPORTANT

Stop a lift truck as gradually as practical. Hard braking and wheel sliding are dangerous and can increase wear and can be harmful to the lift truck.

Plugging

You can change direction, without braking, by “plugging.” As you are traveling, move the direction control lever to the opposite direction and keep the accelerator pedal depressed. The truck should slow to a smooth, controlled stop and then accelerate in the opposite direction.

You can control the plugging distance with the accelerator pedal: The farther the accelerator is depressed, the shorter the reversal distance.

CAUTION

Be careful when plugging. Any sudden change in direction can cause the load to move or fall off the forks.

Operating Safely


Safe operation is the responsibility of the operator.

Watch where you are going. Don't go if you can't see...

Before driving, check all around to be sure that your intended path of travel is clear of obstructions and pedestrians.

While driving, be alert for pedestrians, other vehicles or obstructions in your path of travel.

Watch people. Do not allow anyone to stand or pass under the load or raised forks. Watch for people in your work area even if your truck has warning lights or alarms. They may not watch for you.

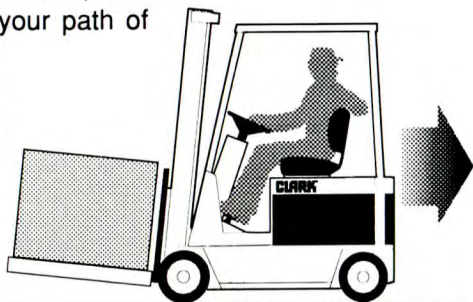

Sound horn at intersections and wherever vision is obstructed. Do not drive a truck up to anyone standing in front of an object.

Protect yourself and those around you...

Operate the truck only from the designated operator's position. Stay within the confines of the lift truck profile dimensions. Keep arms, legs and hands inside the operator's compartment and away from the danger of passing obstructions. Keep under the overhead guard.

NOTICE

An overhead guard is intended to offer protection to the operator from falling objects, but cannot protect against every possible impact. Therefore, it should not be considered a substitute for good judgement and care in loading, handling, storage, etc.

Keep clear of the upright and lift mechanism. NEVER reach into or put hands, arms, legs or head into or through the upright structure or near the carriage or lift chains. Never put any part of your body between the upright and the truck. Don't use the upright as a ladder.

Keep all other persons clear of the load and upright mechanism while attempting to handle a load.

No riders...

Do not carry passengers. The operator is the only one who should be on the truck.

Always be in full control of your lift truck...

Never operate a lift truck or its attachments to perform any of its functions if you are not in the designated operator's position.

Never operate a lift truck when your hands are wet or greasy.

Always pick the smoothest travel route for your lift truck. Avoid bumps, holes, slick spots, and loose objects or debris in your path that may cause the truck to swerve or tip. If these conditions are unavoidable, slow down and carefully drive past them. Slow down for wet or slippery surfaces.

Avoid any sudden movement. Start, stop, travel, steer, and brake smoothly.

Operate your lift truck under all conditions at a speed that will permit it to be brought safely to a stop.



WARNING

Travel slowly when turning. Use special care when traveling without a load because the risk of tipping over is greater with an empty truck, especially at high speed and when cornering.

Travel with the fork carriage tilted back and raised only enough to fully clear the ground or obstacles. When the carriage (load) is in an elevated position, the stability of the truck is reduced.

Do not elevate the load except during stacking.

Grades, ramps, and inclines...

Use special care when operating on ramps, inclines, and uneven areas. Travel slowly. Travel straight up and down. Do not turn or drive at an angle across an incline or ramp. Do not attempt to operate on grades in excess of those specified and/or recommended by the manufacturer.

When the truck is loaded, travel with the load upgrade. When the truck is empty, travel with lifting mechanism (upright) downgrade.



CAUTION

Operate your lift truck only in areas that have been approved for your lift truck type designation. Certain areas contain flammable gases, liquids, dust, fibers, or other hazardous materials. Lift truck operations in these areas must have special approval. These areas must be designated to show the type of lift truck approval required for operation in the area. Be aware that changes to special equipment or poor maintenance can cause the lift truck to lose its special approval.

Be sure that your truck is the correct fire safety type for the area in which you are working. The proper type designation for this truck is listed on the nameplate. In areas classified as hazardous, use only trucks approved for use in those areas. If you are unsure of the classification of the area you wish to enter, check before entering.


Practice safe operation every time you use your truck...

Careful driving and operation is your responsibility. Be completely familiar with all the safe driving and load handling techniques in this operator's manual. Use common sense. Drive carefully; do not indulge in stunt driving or horseplay. Observe traffic rules. Watch for people and hazards. Slow down. Be in full control of your lift truck at all times.

Follow the instructions in this manual to avoid damage to your truck or the possibility of injury to yourself or others.


During your work, observe all functions of your lift truck. This allows you to immediately recognize a problem or irregularity that could affect the safe operation of your truck.

Periodically check the gauges and warning indicator lights in the instrument panel to be sure they indicate a normal condition. If an abnormal condition appears, shut off the key switch immediately and report the problem.

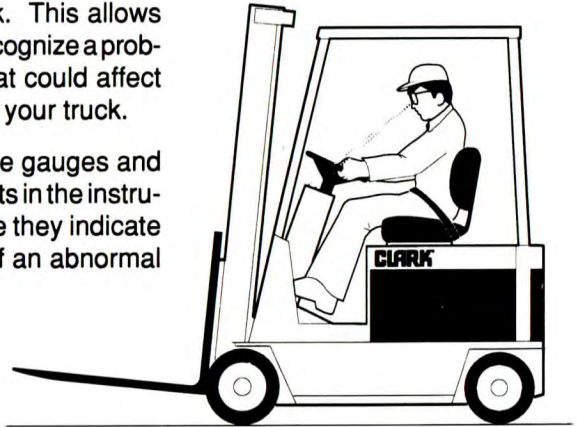


Do not continue to operate a truck that has a malfunction. Stop and have it fixed.

ALWAYS WEAR YOUR SEAT BELT WHEN OPERATING YOUR LIFT TRUCK

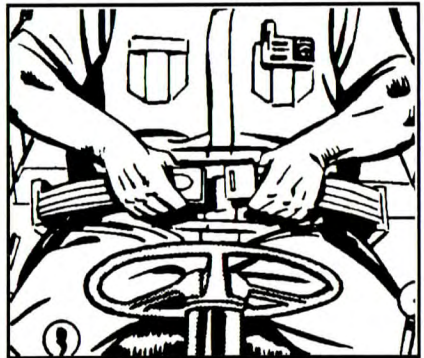

Adjusting the Load Forks

The load forks are adjustable on the hanger shaft. Forks should be spaced as far apart as the load being carried will allow. Both forks should always be the same distance from the center of the fork carriage. To adjust the forks, raise the carriage slightly. Tilt the upright fully forward to reduce friction and make the forks slide easier. Unlock the fork locking pins. Secure the fork locking pins.

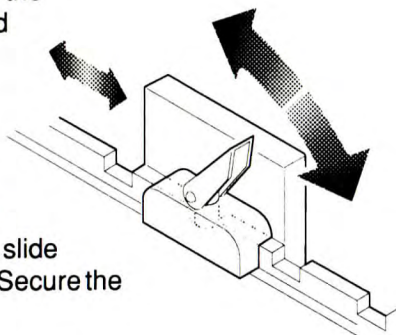

CAUTION

PUSH THE FORKS AWAY FROM YOU when you position them.

Load Handling

Handle only loads that are within the truck rated capacity as shown on the nameplate. This rating specifies the maximum load that should be lifted. However, other factors such as special load handling attachments, loads having a high center of gravity, or uneven terrain may dictate that the safe working load be less than the rated capacity. Under these conditions, the operator must reduce the load carried so that the lift truck remains stable.

Handle only stable or safely arranged loads. Do not handle loads made up of loose, unevenly stacked, or unstable items that can easily shift and fall. Take the time to correctly stack and band loose items. Center the load on the forks.

Do not lift anything that might fall on the operator or a bystander.

Do not handle loads that are higher than the fork carriage unless the load is secured so that no part of it can fall backward.

Keep the load back against the carriage. Loads placed out on the ends of the forks can make the lift truck less stable and more likely to tip up.

Lift and lower with the upright mast vertical or tilted slightly back — **never tilted forward.**

Operate lift and tilt controls slowly and smoothly. Never tilt forward when the carriage (load) is raised, except to pick up or deposit a load over a rack or stack.



WARNING

Slack chains mean rail or carriage hang-up. Raise the upright before you move. If the upright malfunctions in any way or becomes stuck in a raised position, operate the lift control to eliminate any slack chains. DO NOT go under a raised upright or forks to attempt repairs.

Remember, your lift truck is designed to carry loads forward of the front wheels so that the weight of the load is counter-balanced by the weight of the truck.

The farther the load is carried from the pivot point (center of front wheels), the greater will be the uplift at the rear of the truck. Therefore, always carry the load as close to the front wheels as possible (back and flush against the face of the forks).

The capacity load shown on the nameplate is represented by a cube in which the weight is evenly distributed, with the center of gravity located a standard distance from the face of the forks. If the weight of the actual load to be handled is not evenly distributed, put the heaviest part closest to the carriage.

Traveling with a Load

Travel with load or carriage as low as possible and tilted back. Never travel with the load or carriage raised (elevated) in a high position. Do not elevate the load except during stacking.

Observe all traffic regulations and watch for other traffic, pedestrians, and safe clearances. Always look in the direction of travel. Keep a clear view of the path of travel, and when the load blocks your visibility, travel in reverse with the load trailing (except when climbing an incline).

Avoid sudden movements when carrying a load—start, stop, travel, steer, and brake smoothly. Steer clear of bumps, holes, and loose materials or debris on the ground. Lift and tilt slowly and smoothly. Go slowly when turning. Cross railroad tracks at an angle wherever possible.

Use special care when handling and traveling with long, high, or wide loads—to avoid losing the load, striking bystanders or obstructions, or tipping the truck.


Watch clearances around the truck and load as you travel. Raise the forks or attachment only to pick up or stack a load. Look out for obstructions, especially overhead.

Be aware that exaggerated tail swing, when turning while traveling forward, is a characteristic of lift trucks that are steered by the rear wheels. Accordingly, you need to become accustomed to tail swing and always check the tail swing area of the counterweight to be sure it is clear before you turn.

Always be concerned about the stability of your lift truck. When attachments are used, extra care should be taken in securing, manipulating, positioning, and transporting the load. Because attachments generally add extra weight and complexity to the truck, operate trucks equipped with attachments as partially-loaded trucks when not handling a load.

Picking Up and Moving Loads

When picking up a load from the ground, approach the load slowly and carefully align the truck square with the load. The forks should be adjusted to fit the load or pallet being handled and spread as wide as possible to provide good stability and balance. Before lifting, be sure the load is centered and the forks are fully under and supporting the load. Fork length should be at least $\frac{2}{3}$ of load length. With the lift and tilt controls, adjust the forks to the correct height and angle for freely engaging the load pallet. Move forward until the forks are squarely and completely under the load.

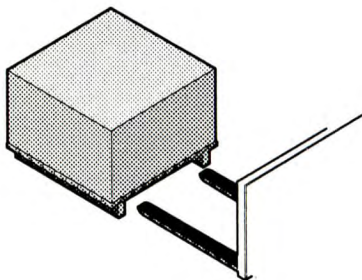

NOTICE

Be sure that the forks do not extend beyond the load and cause damage or tipping of other loads or materials behind the load.

If the forks are longer than the load, move the tips partially under the load without extending beyond the load. Raise the load to clear the floor. Back out several inches, or whatever distance is necessary, then set the load down and move forward until the load is positioned against the carriage.

Raise the load from the floor or stack by tilting the upright back just enough to lift the load from the surface. When stacking or tiering, use only enough backward tilt to stabilize the load.

Then raise the load to traveling height and tilt fully back to travel (except for loads that must be transported as level as possible).

Unloading

To deposit a load on the floor, after the load has been moved to the correct position, tilt the upright forward to a vertical position and lower the load.

Adjust the fork height and tilt the upright forward slightly, as necessary, for smooth removal of the forks from the load (pallet).


Carefully back away to clear the forks from the load.

Raise the forks to traveling height and tilt them back fully.


Stacking

To put a load on a stack:


1. Approach slowly and align the lift truck and load squarely with the stack.

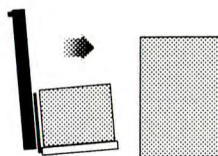


2. Raise the load as the lift truck nears the stack.

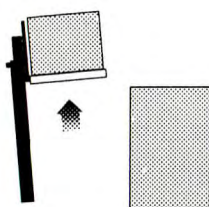

3. Move forward slowly until the load almost touches the stack. The leading edge and sides of the load pallet should line up exactly with the near edge and side of the load or rack on which you are stacking.

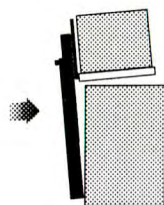


4. Stop close to the stack and further lift the load high enough to clear the top of the stack. Slowly move the load into position. Use care not to damage or move adjacent loads.

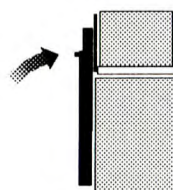


5. When the load is aligned with the stack beneath it, tilt the upright to the vertical position and carefully lower the load onto the top of the stack.

- Lower the forks slightly to clear the load pallet. Tilt the forks forward slightly, if necessary.

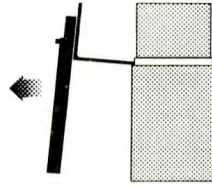

- Check your travel path, then carefully back away until the forks are clear of the stack. Stop and lower the forks to the travel position (6 to 8 inches above the ground), then tilt back to travel.

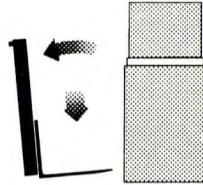

To move a load from a stack:

Approach the stack carefully, truck lined up squarely with the load. With upright mast vertical, raise the forks to the correct height for freely engaging the load pallet. Adjust fork angle as necessary to fit squarely under the load. "Creep" forward until the forks are under the load.

Be sure that the forks do not extend beyond the load, causing damage or tipping of other adjacent loads or materials behind the load. If the forks are longer than the load, move the tips partially under the load without extending beyond the load. Raise the load to clear the undersurface. Back out several inches, then set the load down and move forward until the front face of the forks contacts the load.

Raise the load from the stack by tilting the upright back just enough to lift the load from the surface. Or, with the mast still vertical, raise the forks until they begin to lift the load. At this point, apply the minimum back tilt that will stabilize the load.

Check your travel path, slowly back off until clear of the stack, stop, and then lower the load to the travel position (6 to 8 inches off the ground). Tilt full back to travel (except for certain loads that may have to be transported as level as possible). Be sure the load is back flush against the carriage or front face of the forks.


NOTICE

Certain loads must be transported as level as possible.

Shut-Down Procedure

Always leave your lift truck in a safe condition. When you leave your truck, or park it, follow these safety rules:

- Park in a safe area away from normal traffic.
- Never park on a grade.
- Never park in areas that block emergency routes or equipment, access to fire aisles, or stairways and fire equipment.

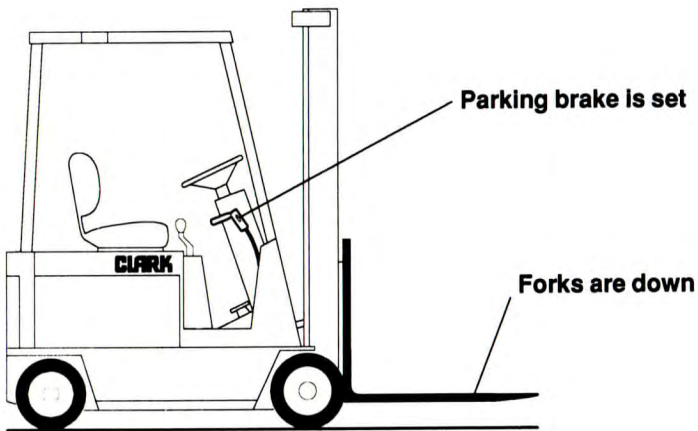

Before leaving the operator's position:

1. Bring truck to complete stop.
2. Put the direction control lever in the NEUTRAL position.
3. Apply the parking brake.
4. Lower the lifting mechanism—carriage and forks or attachment—fully to the floor.

In addition, when leaving the truck unattended:

5. Tilt the upright forward until the forks are level and flat on the floor.
6. Turn the key switch to the OFF position.
7. Block the wheels if you have any doubt about the truck moving from a safe position.

Emergency Towing

Contents

Towing Precautions	6-2
Towing Procedures	6-2

Towing Precautions

If your lift truck becomes disabled but can be moved freely on its own wheels without further damage, use the following procedures to tow it safely to a repair area. It is important for your safety and to the care of your lift truck to use the proper equipment and carefully follow these recommendations for safe towing.



WARNING

Do not tow a lift truck if there is a problem with the brakes or tires, or the steering cannot be operated.

Do not tow up or down ramps and steep inclines.

Do not attempt to tow a lift truck if traction or weather conditions are poor.


Towing Procedures

1. Be sure to apply the parking brake or block the drive wheels on the disabled truck while working around it.
2. If possible, raise the carriage (forks) on the disabled truck about 12 inches (300 mm) from the floor. Secure the carriage with a chain.
3. Obtain another lift truck of equal or larger size for towing. It should be partially loaded, for traction.
4. Secure an approved towing strap around the counterweight **and through the frame** of the truck to be towed. Secure the other end to the towing vehicle.
5. Tow the disabled truck backward. **An operator must be on the towed truck.**

**WARNING**


Never secure the tow strap to the overhead guard, upright, or just the counterweight. The tow strap must be secured to the frame as shown above.

Tow the truck slowly. Careful towing is necessary to prevent injury to personnel or damage to the truck. The truck should be towed at a speed of less than 5 mph (8 kph) with a driver in the seat. Do not lift the truck or any wheels off the floor while the truck is being towed.

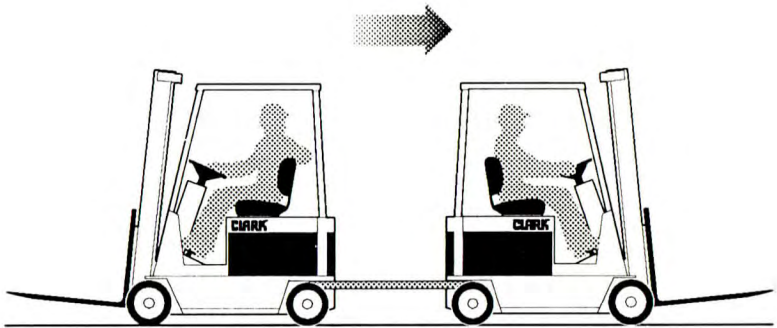**CAUTION**

The power steering does not operate on the disabled truck when the power steer motor is not running, which makes the steering handwheel difficult to turn.

-
6. Park the disabled truck in authorized areas only. Fully lower the forks to the floor, put the direction control lever in the NEUTRAL position and turn the key switch to the OFF position. Engage the parking brake. Remove the key . If necessary, block the wheels to prevent the truck from rolling. Put an "Out of Service" tag on the truck.

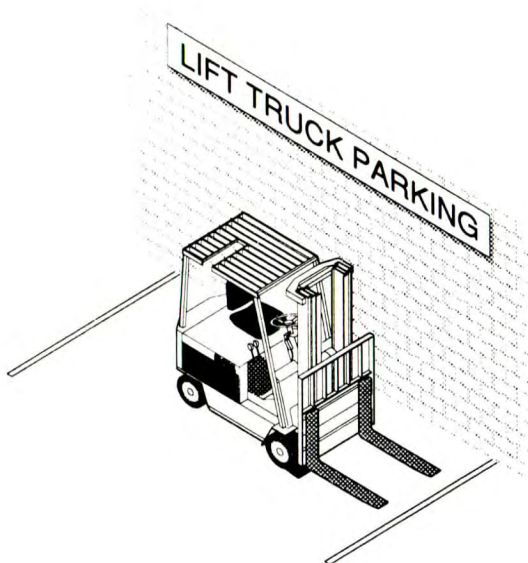

WARNING

Always set the parking brake when you park a lift truck. The truck can move and cause injury or death to personnel near it.

Planned Maintenance

Contents

Introduction	7-2
Safe Maintenance Practices	7-3
Component Locations	7-8
Planned Maintenance Intervals	7-9
PM Report Form	7-12
How to Perform Planned Maintenance	7-13
Visual Inspection	7-13
Functional Tests	7-16
Checking the Hydraulic Fluid	7-22
Critical Fastener Checks	7-22
Air Cleaning the Truck	7-23
Electric Truck Battery Maintenance	7-24
Battery Handling	7-25
Battery Charging	7-26
Battery Removal from Truck	7-27
Battery Cleaning and Care	7-28
Battery Service Records	7-28
How to Get Maximum Battery Life	7-29
Battery Installation	7-29

NOTICE

THIS SECTION IS FOR TRAINED SERVICE PERSONNEL to use as a reference for Planned Maintenance procedures. Complete maintenance information is in Service Manual SM595.

Introduction

NOTICE

Only trained and authorized personnel should perform Planned Maintenance. Local CLARK dealers are prepared to help customers put in place a Planned Maintenance program for checking and maintaining their lift trucks according to applicable safety regulations.



CAUTION

Powered industrial trucks may become hazardous if maintenance is neglected.

As outlined in Section 4, "Operator Maintenance and Care," the operator should make a safety inspection of the lift truck before operating it. The purpose of this daily examination is to check for any obvious damage and maintenance problems, and to have minor adjustments and repairs made to correct any unsafe condition.

In addition to the operator's daily inspection, CLARK recommends that the owner set up and follow a periodic planned maintenance (PM) and inspection program. Performed on a regular basis **by trained personnel**, the program provides thorough inspections and checks of the safe operating condition of the lift truck. "The PM" identifies needed adjustments, repairs, or replacements so they can be made before failure occurs. The specific schedule (frequency) for the PM inspections depends on the particular application and lift truck usage.

This Section recommends typical Planned Maintenance and Lubrication Schedules for items essential to the safety, life, and performance of the truck. It also outlines safe maintenance practices and gives brief procedures for inspections, operational checks, cleaning, lubrication, minor adjustments, and battery maintenance.

Specifications for selected components, lubricants, critical bolt torques, refill capacities, and settings for the truck are found in Section 8.

If you have need for more information on the care and repair of your truck, see your CLARK dealer.

Safe Maintenance Practices

The following instructions have been prepared from current industry and government safety standards applicable to industrial truck operation and maintenance. These recommended procedures specify conditions, methods, and accepted practices that aid in the safe maintenance of industrial trucks. They are listed here for the reference and safety of all workers during maintenance operations. Carefully read and understand these instructions and the specific maintenance procedures before attempting to do any repair work. When in doubt of any maintenance procedure, please contact your local CLARK dealer.

1. Powered industrial trucks can become hazardous if maintenance is neglected. Therefore, suitable maintenance facilities and trained personnel and procedures shall be provided.
2. Maintenance and inspection of all powered industrial trucks shall be done in conformance with the manufacturer's recommendations.
3. A scheduled planned maintenance, lubrication, and inspection system shall be followed.
4. Only trained and authorized personnel shall be permitted to maintain, repair, adjust, and inspect industrial trucks—and in accordance with the manufacturer's specifications.
5. Properly ventilate work area and keep shop clean and floors dry.
6. Avoid fire hazards and have fire protection equipment present in the work area. Do not use an open flame to check for level or leakage of electrolyte or other fluids. Do not use open pans of fuel or flammable cleaning fluids for cleaning parts.
7. Always wear safety glasses. Wear a safety (hard) hat in industrial plants and in special work areas where protection is necessary and required.

-
8. Before starting work on the truck:
 - a. Raise the drive wheels free of the floor and use oak blocks or other positive truck positioning devices.
 - b. Put oak blocks under the load-engaging means, innermasts or chassis before working on them.
 - c. Disconnect the battery before working on the electrical system.
 - d. Remove all jewelry (watches, rings, bracelets, etc.) before working on the truck

NOTICE

Refer to the "Jacking and Blocking" section in the *Service Manual* for proper procedures.

9. Operation of the truck to check performance must be conducted in an authorized, safe, clear area.
10. Before starting to operate the truck:
 - a. Be seated in a safe operating position and fasten your seat belt.
 - b. Make sure the parking brake is applied.
 - c. Put the direction control in NEUTRAL.
 - d. Turn the key switch to the ON position.
 - e. Release the parking brake.
 - f. Check the function of the lift and tilt systems, direction and speed controls, steering, brakes, warning devices, and load handling attachments.
11. Before leaving the truck:
 - a. Stop the truck.
 - b. Fully lower the load-engaging means: upright, carriage, forks or attachments.
 - c. Put the direction control in NEUTRAL.
 - d. Apply the parking brake.
 - e. Turn the key switch to the OFF position.
 - f. Put blocks at the wheels if the truck has a possibility of moving.

12. Brakes, steering mechanisms, control mechanisms, warning devices, lights, governors, lift overload devices, lift and tilt mechanisms, articulating axle stops, and frame members must be carefully and regularly inspected and maintained in a safe operating condition.
13. Special trucks or devices designed and approved for hazardous-area operation must receive special attention to ensure that maintenance preserves the original approved safe operating features.
14. All hydraulic systems must be regularly inspected and maintained in conformance with good practice. Tilt and lift cylinders, valves, and other parts must be checked to ensure that "drift" or leakage has not developed to the extent that it would create a hazard.
15. When working on the hydraulic system, be sure the battery is disconnected, the upright is in the fully-lowered position, and hydraulic pressure is relieved in hoses and tubing.



WARNING

Always put oak blocks under the carriage and upright rails when it is necessary to work with the upright in an elevated position.

16. The truck manufacturer's capacity, operation, and maintenance instruction plates, tags, or decals must be maintained in legible condition.
17. Batteries, limit switches, protective devices, electrical conductors, and connections must be maintained in conformance with good practice. Special attention must be paid to the condition of electrical insulation.
18. To avoid injury to personnel or damage to the equipment, consult the manufacturer's procedures in replacing contacts on any battery connection.
19. Industrial trucks must be kept in a clean condition to minimize fire hazards and help in detection of loose or defective parts.

-
20. Modifications and additions that affect capacity and safe truck operation must not be done without the manufacturer's prior written approval. Capacity, operation, and maintenance instruction plates, tags, or decals must be changed accordingly.
 21. Care must be taken to assure that all replacement parts, including tires, are interchangeable with the original parts and of a quality at least equal to that provided in the original equipment. Parts, including tires, are to be installed per the manufacturer's procedures. Always use genuine CLARK or CLARK-approved parts.
 23. Use special care when removing heavy components, such as counterweight, upright, etc. Be sure that lifting and handling equipment is of the correct capacity and in good condition.

IMPORTANT

Your new CLARK lift truck has been built to meet all applicable mandatory requirements of ANSI B56.1-1988 Safety Standard for Powered Industrial Trucks. Each truck also includes certain safety devices—such as horn and overhead guard—as standard equipment. No additions, omissions, or modifications should be made that affect compliance to the above requirements or in any way minimize the effectiveness of the safety devices.

NOTICE

You should be familiar with additional operating and maintenance safety instructions contained in the following publications:


ANSI/ASME B56.1 - 1988: Safety Standard for Low Lift and High Lift Trucks (Safety Code For Powered Industrial Trucks). Published by: Society of Mechanical Engineers, United Engineering Center, 345 E. 47th Street, New York, NY 10017.

NFPA 505-1982: Fire Safety Standard for Powered Industrial Trucks: Type Designations, Areas of Use, Maintenance and Operation. Available from National Fire Protection Association, Inc., Batterymarch Park, Quincy, MA 02269.

General Industrial Standards, OSHA 2206: OSHA Safety and Health Standards (929 CFR 1910), Subpart N-Materials Handling and Storage, Section 1910.178 Powered Industrial Trucks. For sale by: Superintendent of Documents, US Government Printing Office, Washington, DC 20402.

Component Locations

Use the illustration below to help you locate components included in the PM procedures.

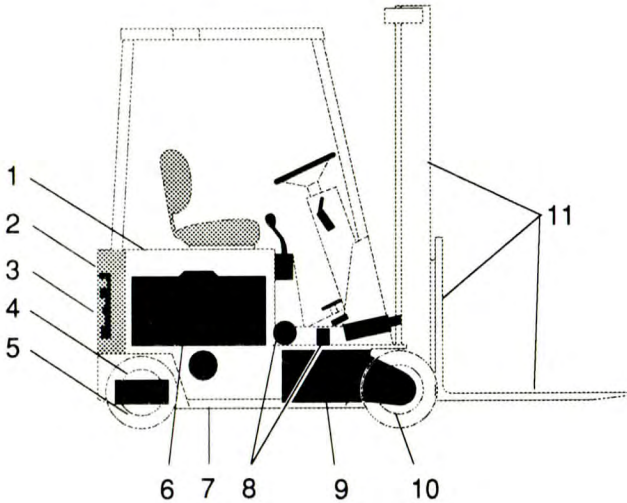

- | | |
|------------------------------|----------------------------------|
| 1. Battery Compartment Cover | 7. Frame |
| 2. Counterweight | 8. Hydraulic Filters |
| 3. SCR Traction Control | 9. Drive Motor |
| 4. Steer Axle | 10. Drive Wheel and Tire |
| 5. Steer Wheel and Tire | 11. Upright, Carriage, and Forks |
| 6. Battery | |

Planned Maintenance Intervals

Time intervals between maintenances are largely determined by operating conditions. For example, operation in sandy, dusty locations requires shorter maintenance intervals than operation in clean warehouses. The indicated intervals are intended for **normal** operation. The operating condition classifications are:

Normal Operation: Eight-hour material handling, mostly in buildings or in clean, open air on clean paved surfaces.

Severe Operation: Prolonged operating hours or constant usage.

Extreme Operation:

- In sandy or dusty locations, such as cement plants, lumber mills, and coal dust or stone crushing sites.
- High-temperature locations, such as steel mills and foundries.
- Sudden temperature changes, such as constant trips from buildings into the open air, or in refrigeration plants.

If the lift truck is used in severe or extreme operating conditions, you must shorten the maintenance intervals accordingly.

NOTICE

Since the operating environment of lift trucks varies widely, the above descriptions are highly generalized and should be applied as actual conditions dictate.

The maintenance time intervals referred to in this manual relate to truck operating hours as recorded by the diagnostic system, and are based on experience which CLARK has found to be convenient and suitable under typical (normal or average) operating conditions. The periods and their designations are:

A = 8-10 hours or daily

B = 50-250 hours or every month

C = 450-500 hours or every 3 months

D = 900-1000 hours or every 6 months

E = 2000 hours or every year

DAILY MAINTENANCE CHECKS	A	B	C	D	E
Check truck for obvious damage and leaks.	•				
Check / clean battery terminals.	•				
Check electrolyte level.	•				
Check capacity, warning plates and decals.	•				
Check condition of tires and wheels. Remove embedded objects.	•				
Check wheel lug nuts.	•				
Check hydraulic sump oil level.	•				
Check diagnostic display.	•				
Check overhead guard condition and bolts.	•				
Check horn operation and other warning devices.	•				
Check steering operation.	•				
Check parking brake operation.	•				
Check directional and speed control operations	•				
Check lift, reach, tilt and auxiliary operation.	•				
Check upright, lift chains and fasteners.	•				
Check load backrest extension and forks.	•				
Check all safety equipment (light, beacons, etc.)	•				

PERIODIC CHECKS AND PLANNED MAINTENANCE (PM)	A	B	C	D	E
Check truck visually and inspect components.		•			
Test drive truck / Check functional performance.		•			
Air clean truck. (Including all Motors)		•			
Check torque on critical fasteners.		•			
Lubricate truck. (See component illustration)					
Clean / check battery terminals, electrolyte level.		•			
Check battery cables / truck receptacle.		•			
Perform battery load test.		•			
Check drive motor brushes.*		•			
Check lift motor brushes.*		•			
Check steer motor brushes.*		•			
Test for shorts and grounds		•			
Clean drive axle air vent.		•			
Check drive axle fluid level.		•			
Drain and replace drive axle fluid.					•
Check brake master cylinder reservoir.		•			
Check brake condition and wear.		•			
Check drive axle mounting and fasteners.		•			
Lubricate steer shaft.		•			
Check / lubricate steer axle wheel bearings.					•
Replace hydraulic sump fluid and filter.					•
Clean / replace hydraulic sump breather.				•	
Lubricate tilt cylinder rod ends.		•			
Lubricate upright and pantograph fittings.		•			
Check lift chain adjustment and wear.		•			
Check / lubricate lift chains.		•			
Lubricate upright rollers.		•			

* Replace as required.

PM Report Form

A planned maintenance (PM) program of regular, routine inspections and lubrication is important for long life and trouble-free operation of the lift truck. Make and keep records of your inspections. Use these records to help establish the correct PM intervals for the application and to indicate maintenance required to prevent major problems from occurring during operation.

As an aid in performing and documenting your PM inspections, CLARK has prepared an ***Electric Truck Planned Maintenance Report Form*** (PM Report Form). Copies of this form may be obtained from authorized CLARK dealers. We recommend that you use this form as a checklist and a record of your inspection and truck condition.

The maintenance procedures outlined in this manual are intended to be used in conjunction with the PM Report Form. They are arranged in groupings of maintenance work that are done in a logical and efficient sequence.

You make check marks or entries on the PM Report Form when you perform the PM. Please notice on the form a special coding system for indicating the importance of needed repairs and/or adjustments.

When you have finished the PM inspections, be sure to give a copy of the report to the designated authority responsible for lift truck maintenance.



WARNING

Do not make repairs or adjustments unless authorized to do so.

How to Perform Planned Maintenance

Visual Inspection

Begin the PM routine with a visual inspection of the lift truck and its components.

1. Walk around the truck and take note of any obvious damage and maintenance problems. Check for loose fasteners and fittings.
2. Check to be sure the capacity plate is in place. If any modifications have been made to the truck, make sure they have been recorded on the capacity plate.
3. Make sure safety and warning plates or decals are attached and legible.

NOTICE

NAMEPLATES AND DECALS: Do not operate a lift truck with damaged or lost decals and nameplates. Replace them immediately. They contain important information.

3. Inspect the truck for any sign of external leakage, such as transmission fluid.
4. Check for hydraulic oil leaks and loose fittings.



CAUTION


HYDRAULIC FLUID PRESSURE: Do not use your hands to check for hydraulic leakage. Fluid under pressure can penetrate your skin and cause serious injury.

5. Be sure that the driver's overhead guard, load backrest extension, and safety devices are in place, undamaged, and attached securely.

Then check all of the critical components that handle or carry the load.


Overhead Guard: Check the overhead guard for damage. Be sure that it is properly positioned and all mounting fasteners are in place and tight.

Load Backrest: Check the load backrest for damage. Inspect the welds on the carriage and load backrest for cracks. Be sure that the mounting fasteners are all in place and tight.

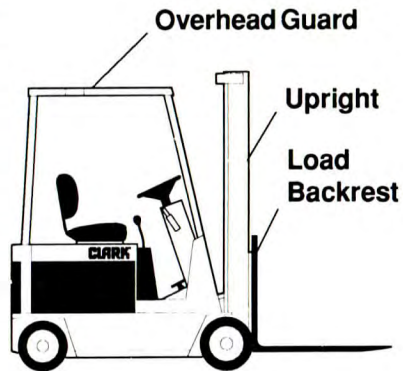

Upright Assembly: Inspect the upright assembly: rails, carriage rollers, lift chains, and lift and tilt cylinders. Look for obvious wear and maintenance problems, damaged or missing parts. Check for any loose parts or fittings. Check for leaks, any damaged or loose rollers, and rail wear (metal flaking). Inspect all lift line hydraulic connections for leaks

If the load backrest extension has been removed, a bolt and washer must be in place on each end of the top fork bar to act as a fork stop.

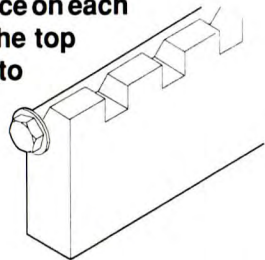

Lift Chains: Carefully check the lift chains for wear, rust, and corrosion, cracked or broken links, stretching, and so on. Check that the lift and carriage chains are adjusted to have equal tension. Check that the lift chain anchor fasteners and locking means are in place and tight.



WARNING


Uprights and lift chains require special attention to maintain them in safe operating condition.

- **Uprights can drop suddenly. Look at the upright, but keep hands out.**
- **Lift chain repairs and adjustments should be made by trained service personnel.**


Forks: Inspect the load forks for cracks, breaks, bending, and wear. The fork top surfaces should be level and even with each other. The height difference between both fork tips should be no more than 3% of the fork length.

**WARNING**

If the fork blade heel is worn down by more than 10%, the load capacity is reduced and the fork must be replaced.

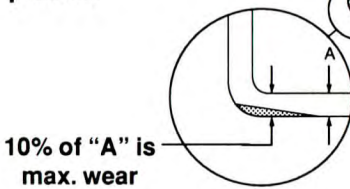


10% of "A" is max. wear

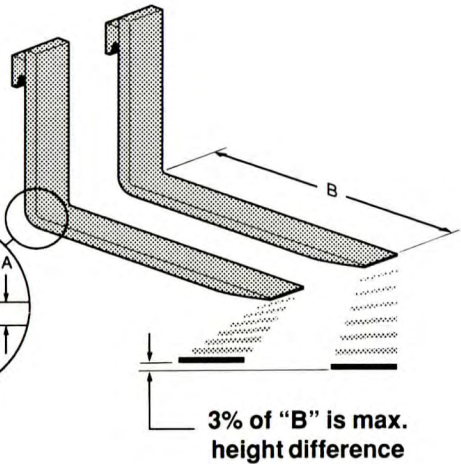

3% of "B" is max. height difference

Inspect the forks for twists and bends. Put a 2"-thick metal block, at least 4" wide by 24" long, on the blade of the fork, with the 4" surface against the blade. Put a 24" carpenter's square on the top of the block and against the shank. Check the fork 20" above the blade to make sure it is not bent more than 1" maximum.

If the fork blades are obviously bent or damaged, have them inspected by a trained maintenance person before operating the truck.


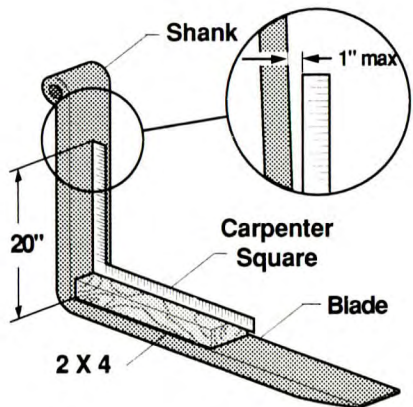


Inspect the fork latches. Be sure they are not damaged or broken and operate freely and lock correctly. Check the fork stop pins for secure condition.

Wheels and Tires: Check the condition of the drive and steer wheels and tires. Remove objects that are embedded in the tire. Inspect the tires for excessive wear and breaks, or "chunking out," and bond failure between the tire and the rim.

Check all wheel lug nuts or bolts to be sure none are loose or missing.


Have missing bolts replaced and loose bolts tightened to the correct torque before operating the truck.

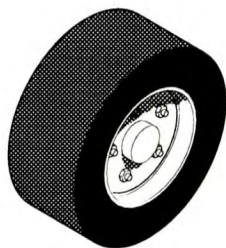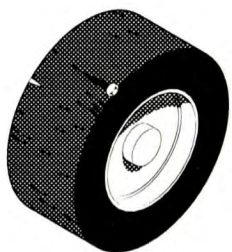

Functional Tests

Now, check that all controls and systems are functioning correctly. First test the horn, lights, and all other safety equipment and accessories. Be sure they are properly mounted and working correctly.

Horn: Press the horn button to check horn function. If the horn or any other part does not operate, report the failure and have it repaired before the truck is put into operation.

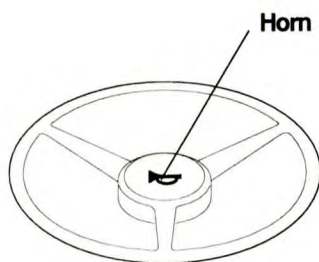

The following tests require you to drive the truck and check for proper operation of all systems. Make sure you are safely seated on the truck, parking brake is applied, forks are fully lowered, and all controls are in neutral or other correct position.


Diagnostic Display: "8888" should display on the digital readout for about one second after you turn the key switch to ON. This indicates that the digital readout is OK. Then, either the battery symbol light or the wrench symbol light should come on.

If the battery symbol light comes on, the digital readout shows the percentage of charge remaining on the battery. When the remaining charge registers as 20% or less, the digital display flashes on and off. If the charge drops to 10%, the lift and tilt functions become inoperable.

If the wrench symbol light comes on, a fault code appears on the digital readout. The fault code may indicate an easily correctable "operator fault" or it may indicate that you need to have the truck serviced.

Fault codes -01 through -06 are usually operator fault codes, and can be corrected by the operator as explained in Section 5, "Operating Procedures." If you see any other codes displayed, the truck needs to be serviced.

Turn the key switch to the OFF position. The hourglass symbol light should come on, and the hours registered on the truck should appear on the digital readout for about four seconds. Write the hourmeter reading on the PM Report Form. Turn the key switch back to ON and apply the parking brake.

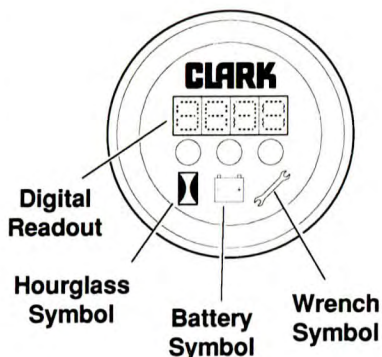


Service and Parking Brakes: Operate service and parking brakes; all hydraulic controls—lift, tilt, and auxiliary (if installed); accelerator; directional controls; and steering system. Be sure all controls operate freely and return to neutral properly.

Check the service brake system. Push the brake pedal fully down and hold. The brakes should be applied before the pedal reaches the floorplate. Check for a feeling of solid resistance when the pedal stops. The pedal must feel firm and not move down farther after it stops. If the pedal continues to creep downward, report the failure immediately. Do not operate the truck until the brakes are repaired.

Check the function of the parking brake. Release, then apply the parking brake with the lever. When correctly adjusted, the lever should snap-lock easily into the over-center applied position.

To check parking brake holding capability and adjustment, park the lift truck on a grade and apply the parking brake. The parking brake should hold a lift truck with rated load on a 15% grade. When the lever is released, the brakes should not drag.

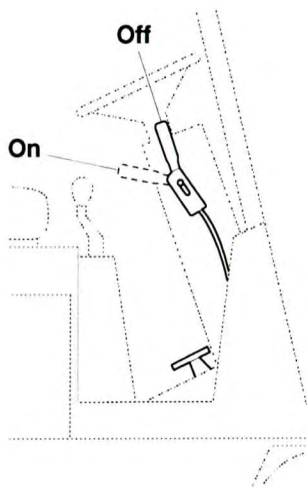

CAUTION

Do not operate a lift truck if the service or parking brakes are not operating properly.

Lift Mechanisms and Controls: Check the function of the lift system and controls.

Pull back on the tilt control lever and hold until the upright reaches the full back tilt position. Push forward on the lever to return the upright to the vertical position. Release the lever.




CAUTION

Be sure that there is adequate overhead clearance before raising the upright.


Pull back on the lift control lever and raise the fork carriage to full height. Watch the upright assembly as it rises. All movements of the upright, fork carriage, and lift chains must be even and smooth, without binding or jerking. Watch for chain wobble or looseness; the chains should have equal tension and move smoothly without noticeable wobble. Release the lever.

If the maximum fork height is not reached, this indicates there is an inadequate (low) oil level in the hydraulic sump tank or severe binding within the upright.

Push forward on the lift control lever. Watch the upright as it lowers. When the forks reach the floor, release the lever.

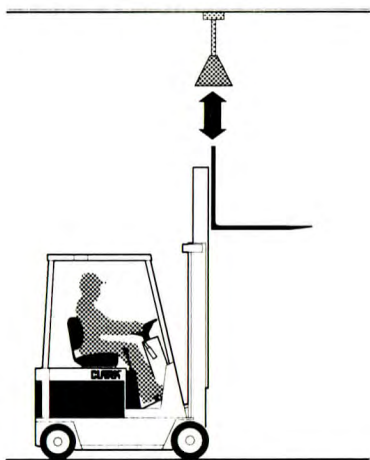


Auxiliary Controls: If your lift truck is equipped with an attachment, test the control lever for correct function and briefly operate the attachment.

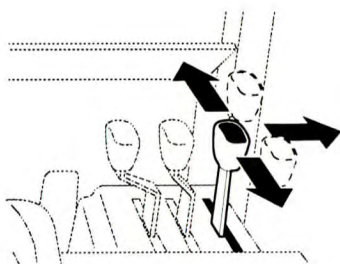

Steering System:

NOTICE

The steering system, steer axle, and steering linkage on the truck should be inspected periodically for abnormal looseness and damage, leaking seals, etc. Also, be alert for any changes in steering action. Hard steering, excessive freeplay (looseness), or unusual sound when turning or maneuvering indicates a need for inspection or servicing.

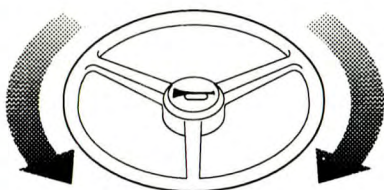

Check the steering system by moving the steering handwheel in a full right turn and then in a full left turn. Return the handwheel (steer wheels) to the straight-ahead position. The steering system components should operate smoothly when the steering wheel is turned.

Never operate a truck with a steering system fault.



WARNING

Fasten your seat belt before driving the truck.

Direction Control and Brakes: Check and make sure that the travel area is clear in front of the truck. Push firmly on the brake pedal. Release the parking brake. Move the direction control lever from NEUTRAL to FORWARD travel position.

Remove your right foot from the brake pedal and put it on the accelerator pedal. Push down until the truck moves slowly forward. Remove your foot from the accelerator pedal and push down on the brake pedal to stop the truck. The brakes should apply smoothly and equally. Be sure the travel area is clear behind the truck.

Put the direction control lever in the REVERSE travel position. Push down on the accelerator pedal until the truck moves slowly in the reverse direction. Remove your foot from the accelerator pedal and push down on the brake pedal to stop the truck. The brakes should apply smoothly and equally.

SCR Traction Control: Test for correct function of the traction control. Check creep speed, 1A range, and plugging.

1. Check creep speed and 1A range while driving the truck in a straight line in both forward and reverse directions. All speed changes should be smooth while increasing and decreasing speed. Notice any unusual drive train noise or action of the controls and drive train components.

Stop the truck with the service brakes. Note any unusual reactions in driving or braking performance. Note any need for adjustment.

2. Check the plugging function first at a slow speed. If operating correctly then test at full speed.

First drive the truck in the FORWARD direction. Push the accelerator pedal and allow the truck to accelerate to the desired travel speed. Then, move the direction control to the REVERSE position while your foot is still depressing the accelerator pedal. The truck should slow to a smooth, controlled stop and accelerate in the opposite direction.

Repeat the test by moving the direction control back to the forward position.

Check the accelerator control while conducting the speed range tests. It must move easily and smoothly throughout the acceleration stroke and return without binding.

Test the service brake (drive motor cut-off) switch.

Drive the truck in FORWARD (or in REVERSE) at creep speed. While holding the accelerator pedal steady, push on the brake pedal with your left foot. The braking action should interrupt power to the drive motor and stop the truck. Release the brake pedal. The drive motor should start moving the truck again.

When you have completed the operational tests, park and leave the truck according to standard shut down procedures.

Be sure to make a record of all maintenance and operating problems you find.

Checking the Hydraulic Fluid

Check the hydraulic sump tank fluid volume. Correct volume is important for proper system operation.

Hydraulic fluid expands as its temperature rises. Therefore, it is preferable to check the fluid level at operating temperature (after at least 30 minutes of truck operation). To check the fluid level, first park the truck on a level surface and apply the parking brake. Lift the carriage to maximum height while listening for “cavitation”—a high-pitched squealing sound the hydraulic pump makes when the fluid level is low.

If the fluid appears to be low, remove the floorplate to gain access to the hydraulic fluid reservoir. Check the fill level and condition of the hydraulic fluid (for age, color or clarity, contamination, etc.). Fill or change (replace) the oil as necessary. **Do not overfill.**

Critical Fastener Checks

Fasteners in highly loaded (critical) components can quickly fail if they become loosened. Also, loose fasteners can cause damage or failure of the component. For safety, it is important that the correct torque be maintained on all critical fasteners of components that directly support, handle, or control the load and protect the operator.

Check critical items, including:

- Drive axle mounting
- Drive and steer wheel mounting
- Counterweight mounting
- Load backrest extension
- Overhead guard
- Tilt cylinder mounting & yokes
- Upright mounting & components

Air Cleaning the Truck

Always maintain a lift truck in a clean condition. Do not allow dirt, dust, lint, or other contaminants to accumulate on the truck. Keep the truck free from leaking oil and grease. Wipe up all oil spills. Keep the controls and floorboards clean, dry, and safe. A clean truck makes it easier to see leakage and loose, missing, or damaged parts. A clean condition helps prevent fires and helps the truck run cooler.

The environment in which a lift truck operates determines how often and to what extent cleaning is necessary. For example, trucks operating in manufacturing plants with a high level of dirt, dust, or lint, (such as cotton fibers or paper dust) in the air or on the floor require more frequent cleaning. If air pressure does not remove grease, oil, or other heavy deposits, it may be necessary to use steam or liquid spray cleaner.

Lift trucks should be air cleaned at every PM interval, and more often if needed.

Use an air hose with special adapter or extension having a control valve and nozzle to direct the air properly. Use clean, dry, low-pressure compressed air. Restrict air pressure to 30 psi (207 kPa), maximum (OSHA requirement).




CAUTION

Wear suitable eye protection and protective clothing.

Air clean: upright assembly; drive axle; battery; cables; switches and wiring harness; SCR traction controls and wiring; drive, lift, and steer motors; and steer axle, steer cylinder, and linkage.

Electric Truck Battery Maintenance

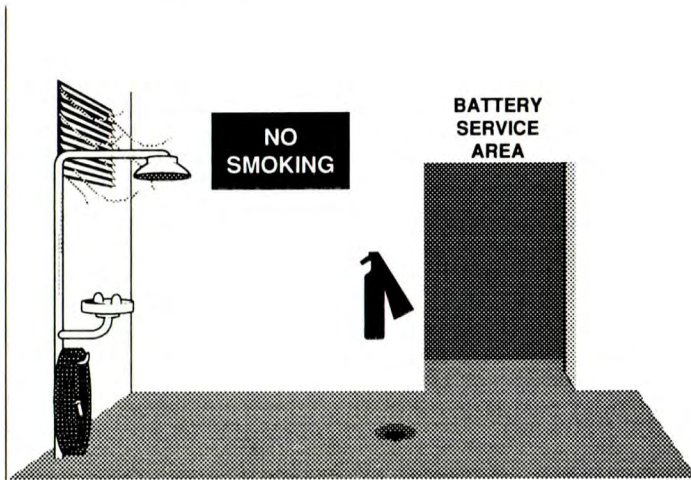

Battery charging installations must be located in areas designated for that purpose. These areas must be kept free of all non-essential combustible materials.

Facilities must be provided for:

- Flushing spilled electrolyte
- Fire protection
- Protecting charging apparatus from damage by trucks
- Adequate ventilation for dispersal of fumes from gassing batteries.

When handling acid concentrates greater than 50% acid (above 1.400 specific gravity), an eye wash fountain must be provided.


A conveyor, overhead hoist, or equivalent material handling equipment must be provided for handling batteries.



IMPORTANT

Electric truck batteries are heavy and awkward to handle. They are filled with a very hazardous chemical solution. On charge, they give off hydrogen which, in certain concentrations, is explosive. And they are costly. Before you remove, service, or install a truck battery, carefully read the following recommendations and instructions.

Battery Handling

1. Change (remove) or service storage batteries only in an area designated for this purpose.
2. Be sure this area has provisions to flush and neutralize spillage, to ventilate fumes from gassing batteries, and for fire protection.
3. This area should be equipped with material-handling tools designed for removing and replacing batteries, including a conveyor or overhead hoist. Use lift hooks that have safety latches.
4. Always use a special lifting device such as an insulated spreader bar to attach the hoist to the battery. The width of the spreader bar hooks must be the same as the lifting eyes of the battery, to prevent damage to the battery. If the spreader bar hooks are movable, carefully adjust the position (width) of the hooks so that the pull is directly upward (vertical) and no side load or force (pressure) is exerted on the battery case. Be sure the lift hooks are the correct size to fit the lifting eyes of the battery.
5. If the battery does not have a cover of its own or has exposed terminals and connectors, cover the top with a non-conductive (insulating) material, such as a sheet of plywood or heavy cardboard, prior to attaching the lifting device.

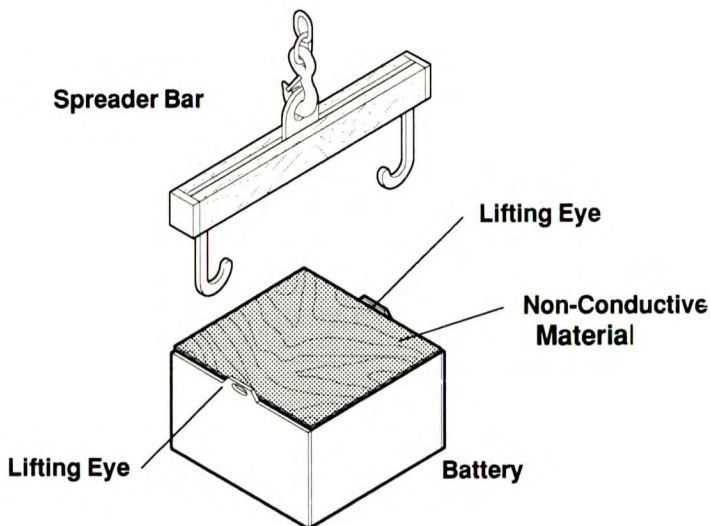

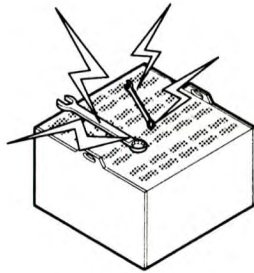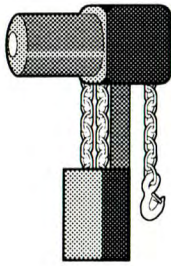

6. Chain hoists or power battery hoists must be equipped with load-chain containers to accumulate the excess lifting chain.
7. Keep all tools and other metallic objects away from the terminals.



WARNING

BATTERY SERVICE: Battery service must be done by trained and authorized personnel. Battery acid can cause severe burns and injury.

Battery Charging

Persons maintaining storage batteries must wear protective clothing such as face shield, long sleeves, and gloves.

Hydrogen emissions from charging batteries are flammable. No smoking is allowed in the charging area. Do not check the electrolyte level with an open flame. Do not allow open flame, sparks, or electric arcs in battery charging area.



WARNING

SULFURIC ACID: The battery contains corrosive acid that can cause injury. If acid contacts your eyes or skin, flush immediately with water and get medical assistance.

**WARNING**

EXPLOSIVE GASES: Do not smoke or have open flames or sparks on battery charging areas or near batteries. An explosion can cause injury or death.

When charging batteries, the vent caps must be kept in place to avoid electrolyte spray. Care must be taken to assure that vent caps are open (clean) and functioning. The battery (or compartment) cover(s) must be open to dissipate heat and gas.


IMPORTANT

If batteries discharge rapidly during normal operation or do not charge to the correct specifications, contact a qualified battery service technician to check the battery for you. Do not add electrolyte or attempt to service the battery.

Battery Removal from Truck

1. Check the designated service and charging area for fire protection, and be sure all sources of ignition are cleared from the area. **Do not smoke.** Be sure all previous noted equipment is in the area, in good repair, and working properly. If the battery is to be serviced, be sure there are provisions to flush and neutralize spillage and to disperse (ventilate) fumes from gassing batteries on charge. And, be sure there are provisions for handling electrolyte.
2. Before attempting to remove or charge a storage battery, the truck should be positioned in the designated battery service area and the parking brake applied so the truck cannot move. Disconnect the battery before removal.
3. If the battery to be handled is not equipped with its own cover, the battery when handling with a non-conductive (insulating) material, such as plywood or heavy cardboard, before attaching the lifting device.
4. Use an approved lifting device with an insulated spreader bar, to remove and transport a truck battery. Be sure the hoist and lifting chains are equipped with safety hooks.

5. Remove the battery and move it to a safe storage location. Store batteries either on an approved battery rack or on a wooden pallet.

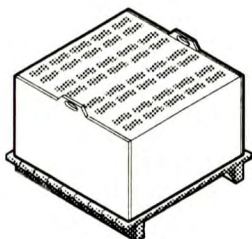

Battery Cleaning and Care

Never wash the battery when it is in the truck. The easiest and most satisfactory method of cleaning a battery is to wash it occasionally with a low-pressure cold-water spray. The top can also be washed off with a solution of baking soda and water (add a box of baking soda to a pail of water and stir until dissolved) and rinsed with clean water. It is good practice to have this solution in a battery room at all times.

IMPORTANT

During cleaning, the battery vent caps must be tightly in place.

Refer to the battery manufacturer or supplier for their recommended battery maintenance and care procedures.

BATTERY SAVER and CLEANER, CLARK Part No. 886398, may be used to clean and protect the truck battery.

Apply a light coat of BATTERY SAVER and CLEANER to entire surface of battery. Allow to set for approximately 30 seconds, then wipe thoroughly with a wiping cloth or rag. Chemical action will dissolve rust and corrosion. After cleaning, apply a second coating for protection. This will prevent the start and growth of corrosion on battery terminals and cable connections.

Battery Service Records

Keep a record of battery service and maintenance to obtain the best service life from your battery and truck. Select a pilot cell, take readings of specific gravity and temperature before and after charging, and record the readings with the date. It is best to change the location of the pilot cell occasionally to distribute any electrolyte loss over the battery. Every 2 or 3 months, take complete battery readings (specific gravity, temperature, and voltage) and make a record of them.

How to Get Maximum Battery Life

1. Follow normal battery maintenance procedures, recharging before 80% discharged and with periodic equalizing charges.
2. Don't add acid to a battery. Only a person trained and qualified to do battery maintenance should determine if this is necessary.
3. Lift battery only with a correctly-constructed lifting device that will not put pressure on the battery case.
4. Keep open flames, tools, and metal objects away from the top of battery to prevent short circuits and explosions.
5. Do not overcharge.
6. Check the battery electrolyte level **after** each charging. Add water if the top of the separator or plates is visible. **Do not overfill!**
7. **Keep the battery clean and dry.** Wash down as needed.
8. Keep battery service records.

Battery Installation

1. Use only a lead-acid battery with the voltage and ampere-hour rating specified for the truck.
2. When changing batteries on electric trucks, replacement batteries must be of the service weight that falls within the minimum/maximum range specified on the truck nameplate.
3. Be sure the truck is properly positioned, parking brake applied, and key switch turned to OFF.
4. Handle battery only with approved lifting device.
5. Install the battery correctly in the truck and secure it in position.

NOTICE

Some trucks are equipped with battery stops or blocks. Others do not require them. If the truck being serviced has battery stops or blocks, be sure none are missing or damaged. Replace them as necessary. If they are an adjustable type, be sure they are correctly adjusted and tightened.

— — — — —



Specifications

Model Designation — Rated Load Capacity

EC500 S30 — 3000 lbs @ 24 in (1750 kg @ 152 mm)

EC500 S35 — 3500 lbs @ 24 in (2000 kg @ 152 mm)

Note: Rated capacity applies when using uprights with maximum MFH up to and including: HVSTD 151 in (3855 mm) ; and HVTSU 152 in (3875 mm).

Wheels and Tires

Drive Tire Size:	Std Cushion	EC500 S30	16 x 7 x 10.5
		EC500 S35	16 x 7 x 10.5
Steer Tire Size:	Urethane	EC500 S30/35	16 x 5 x 10.5

Battery Capacity Range

36 volt, 18 cells, 13-19 plate, 15.7-34.4 kWh, 450-990 amp-hr @ 6 hr rating

48 volt, 24 cells, 11-15 plate, 17.5-35.8 kWh, 375-770 amp-hr @ 6-hr rating

Battery, fully charged: 1.275-1.310 specific gravity

Discharged: 1.140 specific gravity

Fill Capacities—Fluid Volumes

Drive Axle: 2.4 pints (1.12L)

Hydraulic Sump Tank: 3.4 gal (12.9L) usable volume; 4.8 gal (18.2L) total volume

Hydraulic Fluid Recommendation

Normal application: Clark Specification MS-68 Hydraulic Oil

Cold Storage or low temp.: Clark Specification MS-226 Hydraulic Oil

Drive Axle Fluid Recommendation

AMOCO 1000 or Dexron II

Power Steering Fluid Recommendation

Steering system uses fluid from main hydraulic system sump.

Multi-Purpose Grease

For axle ends and wheel bearings, use NLGI Grade No. 1 Lithium Soap-Base Grease, CLARK Specification MS-9B and MS-107B.

For steering linkage, upright mast and carriage rollers, trunnion bushings, tilt cylinder rod ends, and brake pedal shaft, use NLGI Grade No. 2 Lithium Soap-Base Grease, CLARK Specification MS-107C.



Index

A

- Accelerator 5-7
- Accelerator control pedal 3-11
- Adjusting the load forks 5-12
- After operating 5-18
- Air cleaning the truck 7-23
- Ampere-hour rating 3-5
- Application xi
- Attachments 5-14
- Auxiliary control lever 3-13

B

- Battery 7-24
 - Charging 7-26
 - Cleaning and care 7-28
 - Handling 7-25
 - Installation 7-29
 - Maintenance 7-24
 - Maximum battery life 7-29
 - Removal from truck 7-27
 - Service records 7-28
- Battery charge 5-5
- Battery compartment access .. 3-14
- Battery connector warning
 - decal 3-8
- Brakes
 - Parking 3-12
 - Service 3-12
- Braking 5-7

C

- Capacity and safety 1-12
- Capacity plate 3-4
- Chain slack 2-9, 5-13
- Classified area 5-10
- Component locations 7-8
- Control unit 3-15
- Controlling speed 5-7

D

- Daily inspection 1-2
- Daily safety inspection 4-1

- Data plate 3-4

Decals

- Battery connector warning 3-8
- Keep away from forks 3-8
- Parking brake caution 3-7
- Safety warning 3-5
- Seat belt warning 3-6
- Upright warning 3-8
- Diagnostic display 3-10
- Diagnostic display, using 5-5
- Direction control lever 3-11
- Driver's Daily Checklist 4-2, 4-5
- Drop-offs 2-7

E

- Electrical circuit 3-15

F

- Fast turns 2-6
- Fault codes, operator 5-5
- Fork safety 1-8
- Fork wear and damage 7-15
- Forks and upright, positioning .. 5-6
- Functional checks 4-4

G

- Grades 1-11, 5-10

H

- Handwheel 3-12
- Hazards 2-1
- High loads 2-6
- Horn button 3-12
- Hour reading, digital 5-5
- Hydraulic fluid pressure 7-13
- Hydraulic system 3-16

I

- Inclines 1-11, 5-10
- Inspecting your truck 4-2
- Inspection interval 4-2

J

- Jacking and blocking 7-4

- K**
 Keep away from forks decal 3-8
 Key switch 3-10
- L**
 Leaking hydraulic oil 4-2
 Lift 5-6
 Lift control lever 3-13
 Load handling 5-12
 Loading docks 1-13
 Long loads 2-3
 Loose loads 2-2
- M**
 Maintenance. *See* Planned maintenance
 Maintenance, by trained personnel 7-1
 Maintenance intervals 7-9
 Maintenance safety 7-3
 Modifications 3-4
 Modifying the truck 7-6
 Moving loads 5-14
- N**
 Nameplate 3-3
- O**
 Operating procedures 5-1
 Operator compartment 3-9
 Operator protection 1-7
 Operator's Manual viii, 5-2
 Operator's Manual holder 5-2
 Operator's position 5-2, 5-8
 Out of service tag 4-5
 Overhead clearance 2-5
 Overhead guard 1-7, 5-2, 5-8
- P**
 Pallets 2-10
 Parking 1-14, 4-4, 5-18
 Pedestrians 1-6
 Picking up loads 5-14
 Pinch points 1-9
 Planned maintenance 7-1
 Air cleaning the truck 7-23
 Auxiliary controls 7-19
 Battery 7-24
 Brakes 7-20
 Diagnostic display 7-17
 Direction control 7-20
 Forks 7-15
 Functional tests 7-16
 Hydraulic fluid 7-22
 Lift chain 7-14
 Lift mechanisms and controls 7-19
 Load backrest 7-14
 Overhead guard 7-14
 Parking brake 7-18
 PM Report Form 7-12
 SCR traction control 7-21
 Service brake 7-18
 Steering system 7-20
 Upright assembly 7-14
 Wheels and tires 7-16
 Plugging 5-7
 Power steering, disabled 6-3
 Power steering system 3-16
 Publications, related
 Safety 7-7
 Service Manual 7-1
- R**
 Ramps 1-11, 5-10
 Rear swing 2-4
 Repairs 4-2
 Riders 1-5, 5-9
 Right-angle stacking 2-8
- S**
 Safe maintenance practices 7-3
 Safety decals 3-3
 Safety messages x
 Safety, operating safely 5-8
 Safety rules 1-1
 Safety signs x
 Safety warning decal 3-5
 Seat adjustment 3-14, 5-4
 Seat belt 1-4, 3-6, 5-4
 Seat belt warning decal 3-6
 Service manual 7-1
 Skids 2-10
 Slopes 1-11
 Specifications 8-1

Stability	5-6, 5-9, 5-12
Stacking	5-16
Starting from a safe condition ...	5-3
Static return to off	3-15
Surface, traveling	1-12

T

Tilt	5-6
Tilt control lever	3-13
Tip over	1-4, 3-6
Towing precautions	6-2
Towing procedures	6-2
Travel, safety	1-10
Traveling with a load	5-13
Truck description	3-2
Truck weight	3-5
Turning	5-9
Type designation	3-7, 5-10

U

U.L. classification label	3-7
U.L. construction type	2-11
Unloading	5-15
Upright warning decal	3-8

V

View, operator's	1-10
Visual checks	4-3
Visual inspection	7-13
Voltage	3-5

W

Wide loads	2-3
------------------	-----

- - -



SERIAL NUMBERS:

TRUCK **E235** - _____ - _____

CONTROL PANEL _____

DRIVE AXLE _____


DRIVE MOTOR _____

LIFT PUMP MOTOR _____

STEER PUMP MOTOR _____

STEER AXLE _____

UPRIGHT _____



Additional copies of this manual may be purchased from
YOUR AUTHORIZED CLARK DEALER.

CLARK[®] **Material Handling
Company**

Lexington, KY 40507
Printed in USA